

4117T

17" Light Duty Industrial PC

Revision	Description	Date
A	Manual Released	9/06

Part Number 144811 (A)

Trademark Information

Brand or product names are registered trademarks of their respective owners. Windows is a registered trademark of Microsoft Corp. in the United States and other countries.

Copyright Information

This document is copyrighted by Xycom Automation, LCC (Xycom Automation) and shall not be reproduced or copied without expressed written authorization from Xycom Automation.

The information contained within this document is subject to change without notice. Xycom Automation does not guarantee the accuracy of the information.

United States FCC Part 15, Subpart B, Class A EMI Compliance Statement:

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

For European Users - WARNING:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

INSTALLATION: Electromagnetic Compatibility WARNING:

The connection of non-shielded equipment interface cables to this equipment will invalidate FCC EMI and European Union EMC compliance and may result in electromagnetic interference and/or susceptibility levels which are in violation of regulations applying to the legal operation of this device. It is the responsibility of the system integrator and/or user to apply the following directions relating to installation and configuration:

All interface cables must include shielded cables. Braid/foil type shields are recommended. Communication cable connectors must be metal, ideally zinc die-cast backshell types, and provide 360-degree protection about the interface wires. The cable shield braid must be terminated directly to the metal connector shell, ground drain wires alone are not adequate.

Protective measures for power and interface cables as described within this manual must be applied. Do not leave cables connected to unused interfaces or disconnected at one end. Changes or modifications to this device not expressly approved by the manufacturer could void the user's authority to operate the equipment.

EMC compliance is, in part, a function of PCB design. Third party add-on AT/XT peripheral PCB assemblies installed within this apparatus may void EMC compliance. FCC/CE compliant PCB assemblies should always be used where possible. XYCOM AUTOMATION can accept no responsibility for the EMC performance of this apparatus after system integrator/user installation of PCB assemblies not manufactured and/or expressly tested and approved for compliance by XYCOM AUTOMATION. It is the responsibility of the system integrator/user to ensure that installation and operation of such devices does not void EMC compliance.

Table of Contents

CHAPTER 1 – INTRODUCTION	1
GENERAL INFORMATION.....	1
<i>Standard Features</i>	1
<i>LCD Display</i>	2
<i>Touch Screen</i>	2
FRONT AND SIDE PANELS	4
UNPACKING THE SYSTEM.....	5
QUICK STARTUP	5
CHAPTER 2 — INSTALLATION	6
INSTALLATION OVERVIEW.....	6
MECHANICAL DIMENSIONS	8
MOUNTING OPTIONS	9
<i>Panel Mounting</i>	9
<i>Panel Mounting Diagram</i>	10
<i>Wall Mounting</i>	11
<i>Arm Mounting</i>	13
CHAPTER 3 – ICPMB-7570 MOTHERBOARD.....	14
<i>ICPMB-7570 CPU Board</i>	14
<i>Product Overview</i>	14
<i>Specifications</i>	14
<i>Graphics Support</i>	15
<i>Display</i>	15
<i>Internal Graphics Features</i>	15
<i>Intel® Embedded Graphics Drivers</i>	15
ICPMB-7570E CPU BOARD LAYOUT	16
<i>Jumper Settings</i>	17
<i>JP2: Clear CMOS Setup</i>	17
<i>JP4: CF card setup</i>	18
<i>JP5: LCD voltage setup</i>	18
<i>JP6: RS-232/485 Setup(for COM3)</i>	18
<i>Connector Pin Outs</i>	19
AMI BIOS SETUP.....	29
<i>Starting Setup</i>	29
<i>Using Setup</i>	31
SETUP SUBMENU: MAIN	31
SETUP SUBMENU: ADVANCED.....	32
CPU CONFIGURATION	32
IDE CONFIGURATION	34
PRIMARY IDE MASA.....	35
FLOPPY CONFIGURATION.....	38
SUPER I/O CONFIGURATION.....	39
H/W HEALTH CONFIGURATION	41
REMOTE ACCESS CONFIGURATION	42
USB CONFIGURATION	43
CHAPTER 4 – MAINTENANCE.....	63
GENERAL PREVENTIVE MAINTENANCE	63
<i>Fuse Replacement</i>	63
RECOMMENDED HARD DRIVE PREVENTIVE MAINTENANCE	63
PRODUCT REPAIR PROGRAM / RETURNING A UNIT TO XYCOM AUTOMATION	64
CHAPTER 5 – TROUBLESHOOTING.....	65
DIAGNOSTIC TESTING.....	65
RUNNING THE TESTS.....	67

REINSTALLING OPERATING SYSTEMS.....	68
<i>Windows® 2000 Reinstallation</i>	68
<i>Windows XP® Reinstallation</i>	68
INSTALLING DRIVERS.....	69
<i>Video Drivers</i>	69
<i>Touch Screen Drivers</i>	69
<i>Miscellaneous Drivers</i>	70
APPENDIX A TECHNICAL SPECIFICATIONS	71
HARDWARE SPECIFICATIONS.....	71
* NOMINAL POWER IS MEASURED FOR A BASE CONFIGURATION ONLY. ANY ADDITIONAL EXPANSION AND/OR DEVICES WILL INCREASE THE INPUT POWER REQUIRED. ENVIRONMENTAL SPECIFICATIONS.....	71
ENVIRONMENTAL SPECIFICATIONS	72
APPENDIX B – POWER-ON SELF-TEST MESSAGES.....	73
POST MESSAGES	73
POST BEEP	73
ERROR MESSAGES	73
APPENDIX C – HOW TO UPGRADE A NEW BIOS	76
BIOS UPDATE PROCEDURE.....	76
RECOVERING YOUR OLD BIOS.....	77

Chapter 1 – Introduction

General Information

The 4117T 17" LCD TFT Panel PC, takes advantage of a modern flat-panel display, ICPMB-7560 CPU board, drive spaces and a power supply for minimum size. It is an IBM PC/AT® compatible computer specially designed to meet the applications for light duty environments.

Standard Features

The 4117T comes standard with the following features:

- ICPMB-7570 CPU board equipped with a high performance socket Pentium® M 1.4GHz CPU with 400 MHz front system bus and 2MB cache
- 4X AGP video controller
- 10/100 and 10/100/1000 Base T Ethernet ports
- 2 USB 2.0 ports
- Audio (in/out/mic)
- Three RS-232 serial ports
- Video, printer, and PS/2 ports
- 17" flat panel TFT XGA (1280 x 1024) LCD
- 100-240 VAC, 50-60 Hz power supply
- Analog resistive touch screen
- Internal 80GB hard disk drive
- Slim line CD-R/W with DVD-ROM drive
- 2 DDR 333 sockets, 512MB SDRAM DIMM
- 1 half-length of PCI expansion port
- AC power supply
- NEMA 4/4X/12 front panel
- RoHS compliant
- Windows® XP Operating System

Optional Features:

- DDR 333 1GB - 2GB SDRAM DIMM
- DVD +/-RW
- Windows® 2000 Operating System

LCD Display

Table 1-1 identifies the features of the 4117T LCD display.

Table 1-1. 4117T LCD Display Specifications

Display Model	AUO
Display Type	17" TFT color
Resolution	1280 x 1024
Maximum colors	16.2M
Brightness	300 cd/m ²

Touch Screen

Table 1-2 identifies important specifications of the 4117T touch screen.

Table 1-2. 4117T Touch Screen Specifications

Touch Screen Model	Description
Screen Type	Eight wire analog resistive touch screen
Resolution	Continuous
Light Transmission	Typical value 75%
Surface Hardness	4H (Test condition: ASTM D3363-92A)
Support Driver	Supports Windows 2000/XP

The figures on the next several pages show the internal and external components on the front and back panels of the unit to help you locate features relevant to installation.

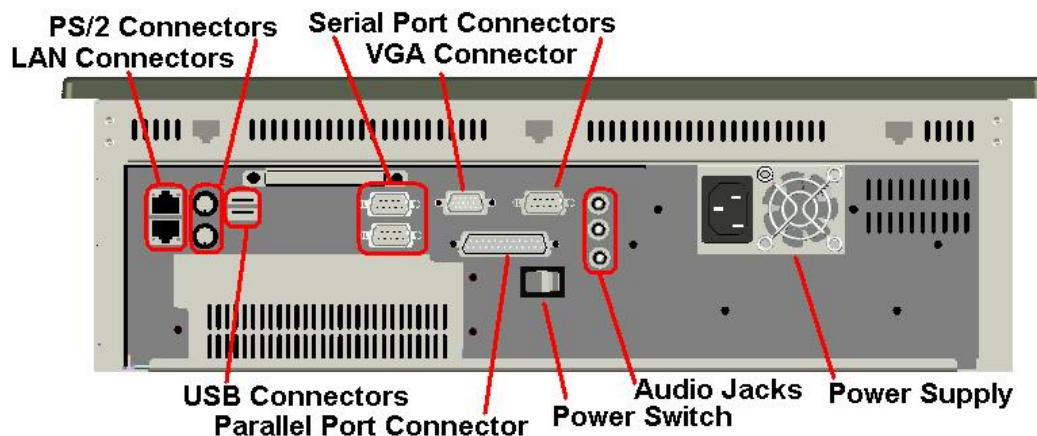


Figure 1-1. I/O Panel

Back Panel

The diagram below shows the back panel of the 4117T. For maintenance, installation or upgrade, first remove the back cover by unfastening 13 screws as shown in the diagram below.

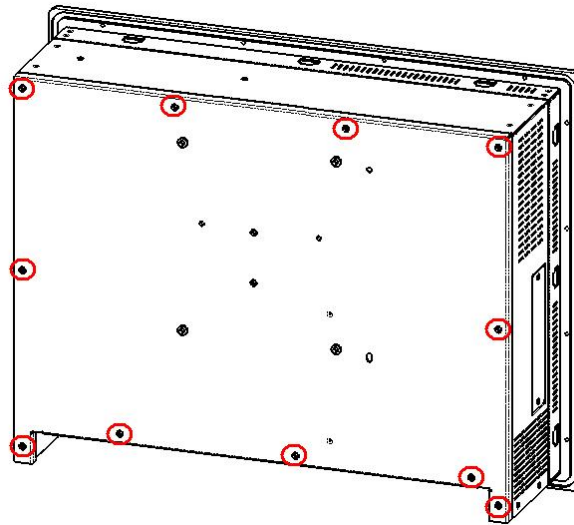


Figure 1-2. System Back Panel

Caution

Before any installation or un-installation, please take precautions to prevent damage to the components due to static electricity.

Front and Side Panels

One CD R/W- DVD and one PCMCIA are accessible from the side of the chassis.

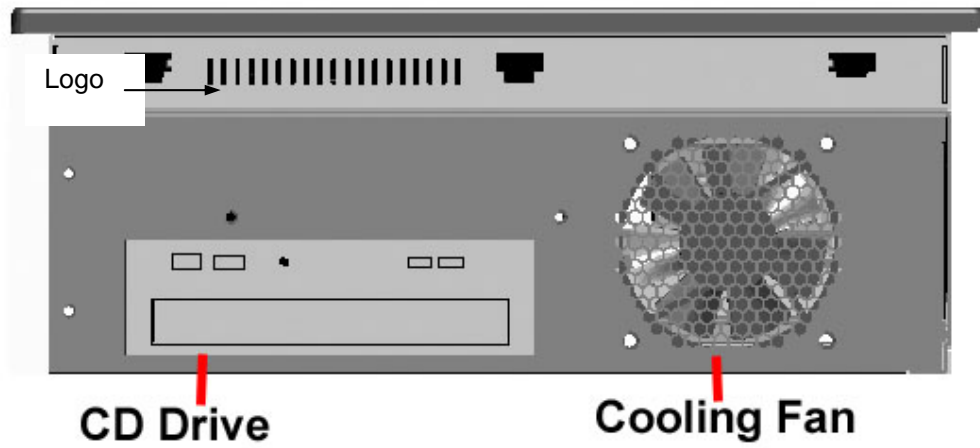


Figure 1-3. Right Side View

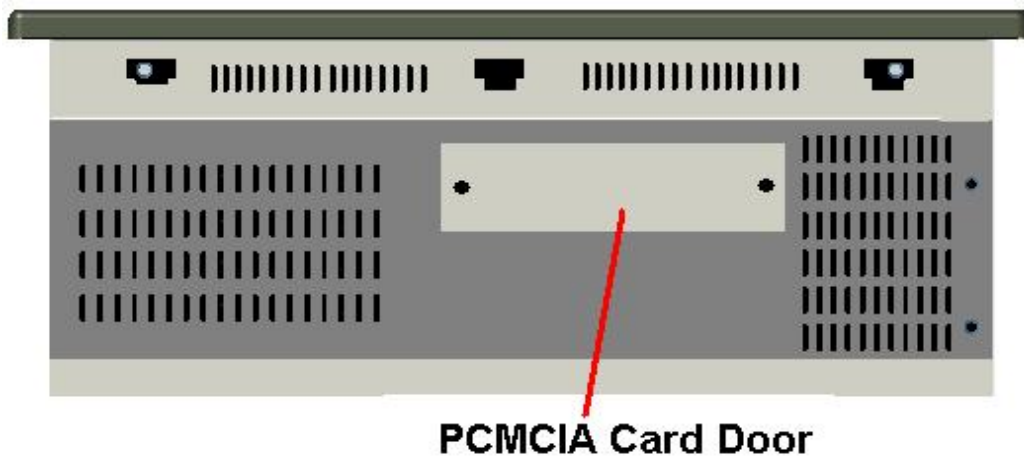


Figure 1-4. Left Side View

Unpacking the System

When you remove the system from its shipping container, verify that you have the parts listed below. Save the box and inner wrapping in the event you need to reship the unit.

- 4117T Unit
- Documentation kit, which includes:
 - Power cable
 - Twelve panel mounting clamps
 - Documentation and Support Library CD-ROM
 - Operating System Recovery Media or retail operating system (CD-ROM)

Quick Startup

This section gives you the steps to get the system up and running without explaining the capabilities and options.

Warning

Remove power from the unit and disconnect the power cord before making any adjustments to the inside or outside of the computer.

To prepare the system for use, perform the following steps.

1. Attach optional keyboard to the keyboard port, and optional mouse to the mouse port.
2. Confirm that the 100-240 VAC selector switch on the power supply is set appropriately.
3. Attach the power cord from the power receptacle to a properly grounded 100-240 VAC, 50-60 Hz outlet.
4. Turn on power to the unit (via an outlet power switch if applicable). The system will boot up into the operating system.
5. Install application software via the CD-ROM, or the network.

Chapter 2 — Installation

Installation Overview

The rugged design of the 4117T unit allows it to be installed in most industrial environments. The system is generally placed in a NEMA 4/4X/12 enclosure to protect against contaminants such as dust, and moisture. Metal enclosures also help minimize the effects of electromagnetic radiation that nearby equipment can generate.

Read the following sections carefully to be sure that you are complying with all the safety requirements.

1. Select a NEMA rated enclosure and place the unit to allow easy access to the system ports (see other sections in this chapter and Appendix A).
 - To assure a NEMA 4 seal choose an approved enclosure that has a 14-gauge (0.075 in/1.9 mm thick steel or 0.125 in/3.2 mm thick aluminum) front face.
 - Be sure to account for the unit's depth when choosing the depth of the enclosure.
2. Create a cutout in the enclosure (see *Figure 2-2*).
 - Be sure to place the unit at a comfortable working level
 - Make sure the area around the cutout is clean and free from metal burrs
3. Mount the unit in an upright position and properly secure the unit into the panel.
 - Tighten the twelve panel mounting clamps to 25 inch-pounds (2.8 Newton-meters / 28Kgf cm).
4. Attach one end of the power cord to the power receptacle on the unit and the other end to a properly grounded 100-240 VAC, 50-60 Hz outlet.
5. Turn on power to the system. The system will boot up the installed operating system.
6. Install the application software via a CD-ROM, or the network.

Additional aspects to take into account when mounting your 4117T unit:

- Consider locations of accessories such as AC power outlets and lighting (interior lighting and windows) for installation and maintenance convenience
- Prevent condensation by installing a thermostat-controlled heater or air conditioner
- To allow for maximum cooling, avoid obstructing the airflow
- Place any fans or blowers close to the heat generating devices. If using a fan, make sure that outside air is not brought into the enclosure unless a fabric or


other reliable filter is used. This filtration prevents conductive particles and other harmful contaminants from entering the enclosure.

- Do not select a location near equipment that generates excessive electromagnetic interference (EMI) or radio frequency interface (RFI). Examples of these types of equipment are: high power welding machines; induction heating equipment; and large motor starters.
- Place incoming power line devices (such as isolation or constant voltage transformers, local power disconnects, and surge suppressers) away from the system. The proper location of incoming line devices keeps power wire runs as short as possible and minimizes electrical noise transmitted to the unit.
- Make sure the location does not exceed the unit's shock, vibration, and temperature specifications
- Install the unit in the rack or panel in such a way as to ensure that it does not cause a hazard from uneven mechanical loading
- Incorporate a readily-accessible disconnect device in the fixed wiring on permanently connected equipment
- Avoid circuit overloading of the supply circuit

Mechanical Dimensions

Front Panel: 17.79” (451.61 mm) x 13.99”(355.25 mm) x 0.39”(9.79 mm) (WxHxD)

Cabinet: 15.1” (399.98 mm) x 12.91” (328 mm) x 4.94” (125.41 mm) (WxHxD)

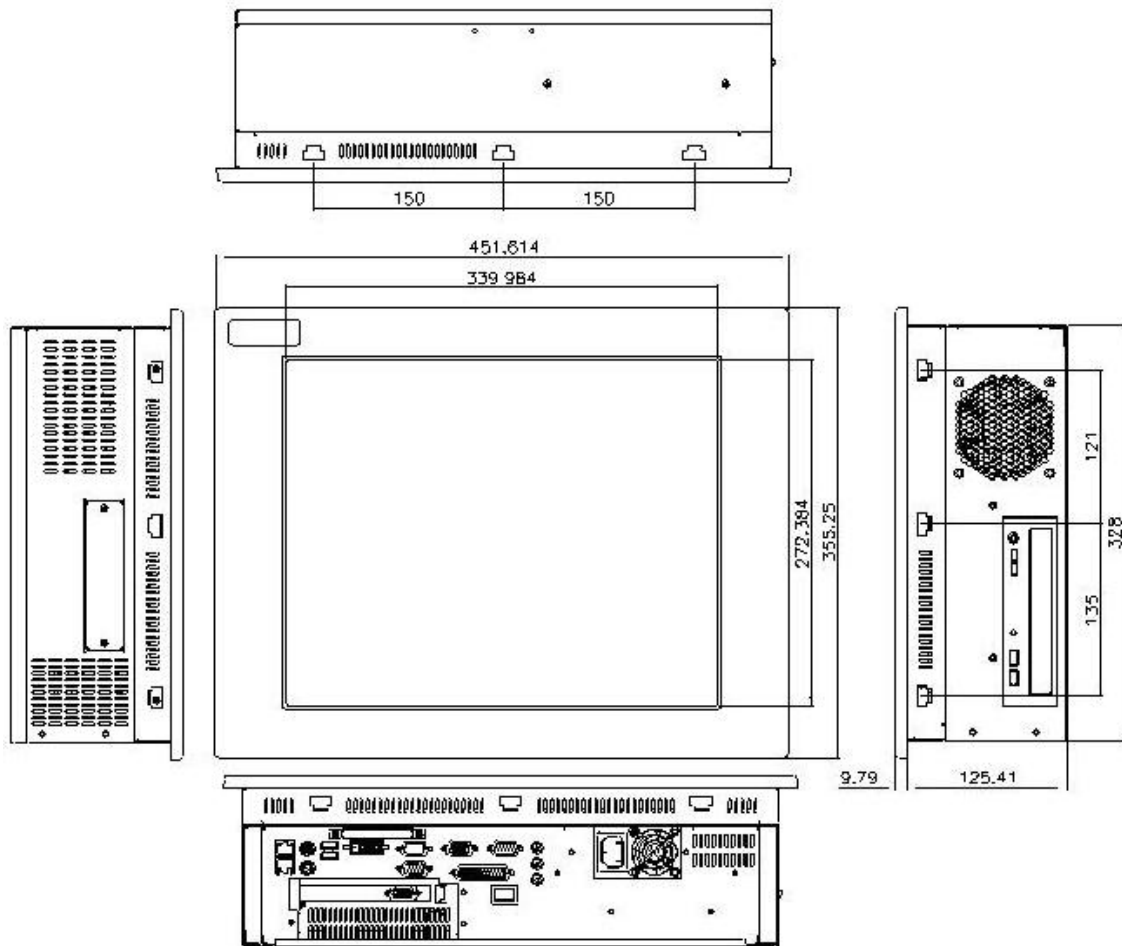

Note: All dimensions in mm)

Figure 2-1. Unit Dimensions

Mounting Options

The 4117T can be mounted to a panel, to the wall, or to an arm. The following sections describe each mounting option for the 4117T.

Panel Mounting

The 4117T is designed for panel mounting. Before mounting the 4117T to the panel, check the cut out dimensions as shown in Figure 2-2. Then, mount it to the panel using twelve supporters, as shown in the Figure 2-3 and Figure 2-4 (see next page).

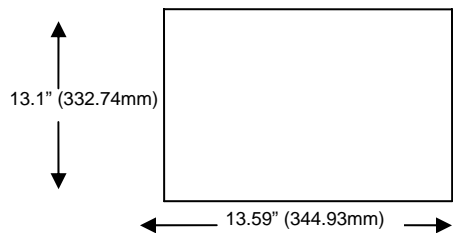


Figure 2-2. Panel Cutout Dimensions

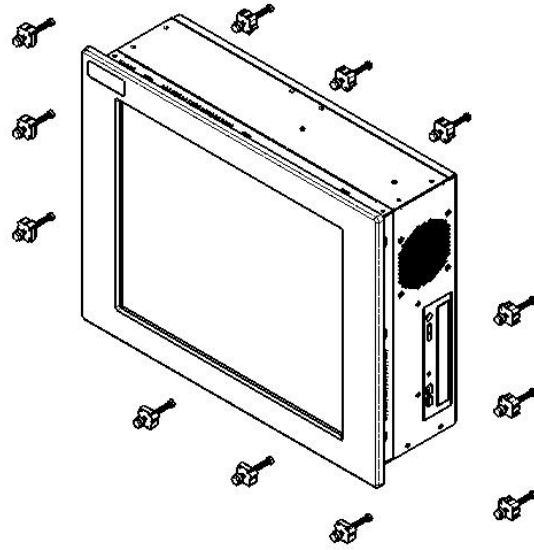


Figure 2-2. Panel Mounting Diagram

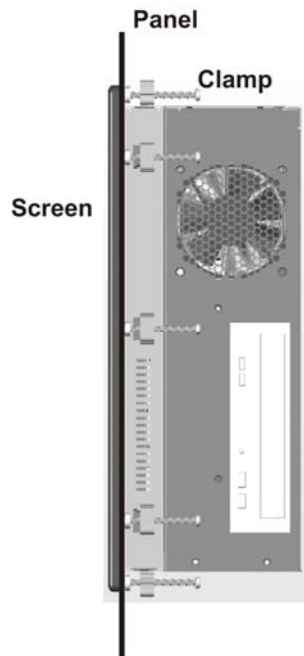


Figure 2-4 Panel Mounting Diagram

Wall Mounting

The 4117T is suitable for wall mount using the included brackets and hardware. See Figure 2-5 for wall mounting bracket. See Figure 2-6, Figure 2-7 and Figure 2-8 for wall-mounting diagrams

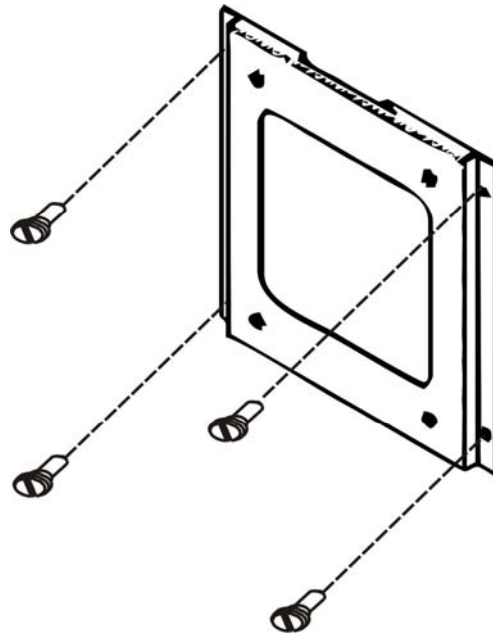


Figure 2-5. Wall Mounting Bracket

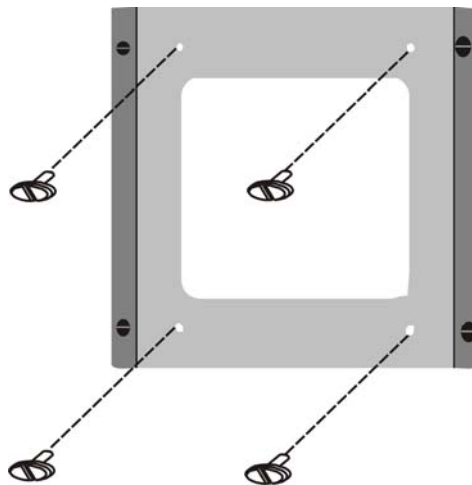


Figure 2-6. Chassis Support Screws

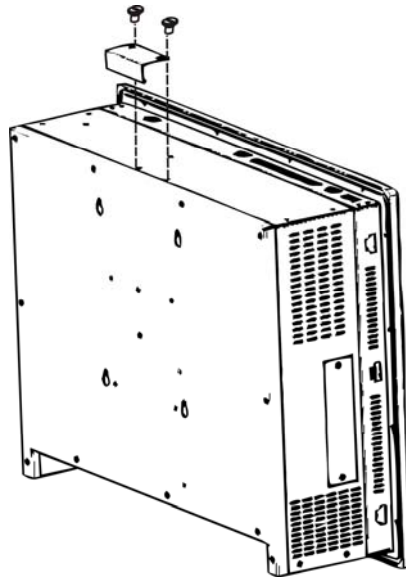


Figure 2-7. Wall Mounting Diagram – Install wall-mounting hook


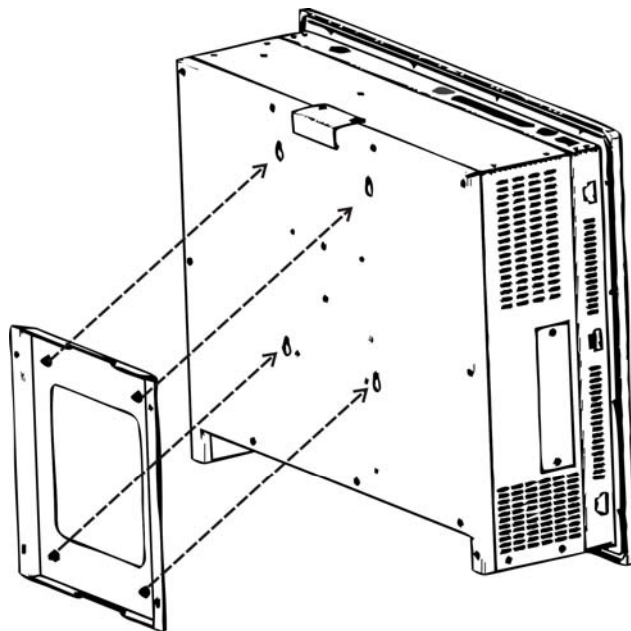


Figure 2-8. Wall Mounting Diagram – Mount the bracket

Arm Mounting

The 4117T also accommodates 75/100 mm interface pads for arm mounting. Figure 2-9 gives the dimensions for arm mounting.

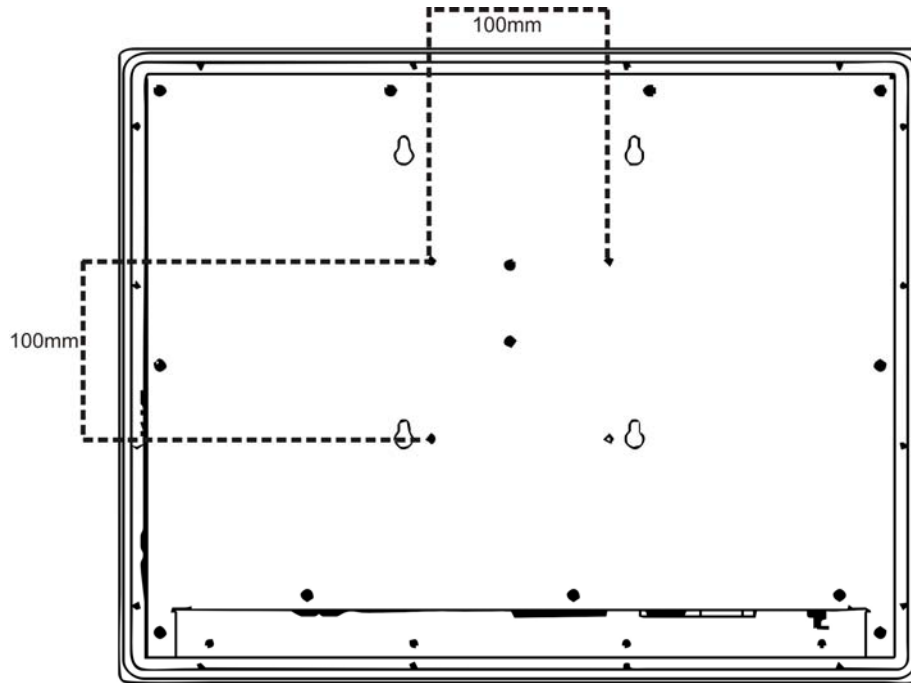

All dimensions in mm

Figure 2-9. Arm Mounting Dimensions

Chapter 3 – ICPMB-7570 Motherboard

ICPMB-7570 CPU Board

Product Overview

The 4117T is equipped with a ICPMB-7570 Socket 479 Pentium M with CPU control board. It is equipped with a high-performance processor and advanced high performance multi-mode I/O.

Specifications

The following section lists some of the features of the 855GME and the ICH4 chipsets. For more information on these two chipsets please refer to the Intel website.

- 400 MHz system bus delivers a high-bandwidth connection between the processor and the platform
- Integrated graphics utilizing Intel® Extreme Graphics 2 technology
- AGP 4X support
- Three USB host controllers provide high-performance peripherals with 480 Mbps of bandwidth, while enabling support for up to six USB 2.0 ports (only two available on the I/O panel).
- The latest AC '97 implementation delivers 20-bit audio for enhanced sound quality and full surround sound capability
- LAN Connect Interface (LCI) provides flexible network solutions such as 10/100 Mbps Ethernet and 10/100 Mbps Ethernet with LAN manageability
- Dual Ultra ATA/100 controllers, coupled with the Intel® Application Accelerator support faster IDE transfers to storage devices
- PCI Local Bus Specification, Revision 2.2-compliant with support for 33 MHz PCI operations.
- ACPI Power Management Logic Support
- Enhanced DMA controller, Interrupt controller, and timer functions
- Supports Audio Codec '97, Revision 2.3 specification
- Alert On LAN* (AOL) and Alert On LAN 2* (AOL2)

Graphics Support

The graphics features listed below are all integrated on the 855GME chipset.

Display

- Analog display support
- Dual independent pipe support
 - Concurrent: different images and native display timings on each display device
 - Simultaneous: same images and native display timings on each display device
- DVO (DVOB and DVOC) support
 - Digital video out ports DVOB and DVOC with 165 MHz dot clock on each 12-bit interface; two 12-bit channels can be combined to form one dual-channel 24-bit interface with an effective dot clock of 330 MHz
 - Compliant with DVI Specification 1.0
- Dedicated Local Flat Panel (LFP) LVDS interface

Internal Graphics Features

- Core frequency
 - Display core frequency of 133 MHz
 - Render core frequency of 133 MHz

Intel® Embedded Graphics Drivers

- Graphics interface support
 - GDI and DirectX* DirectDraw* with overlay for Windows* XP, Windows* 2000, and Windows* Embedded XP
 - XFree86*, XAA, and Xv for Linux*
- Multi-monitor support
 - Multiple programmable configurations
 - Dual independent display
 - DVO device support/TV-Out
- Dynamic display-mode support
 - User definable and extensible
- Embedded video BIOS
 - Common port interface support
 - Full VGA compatibility

ICPMB-7570E CPU Board Layout

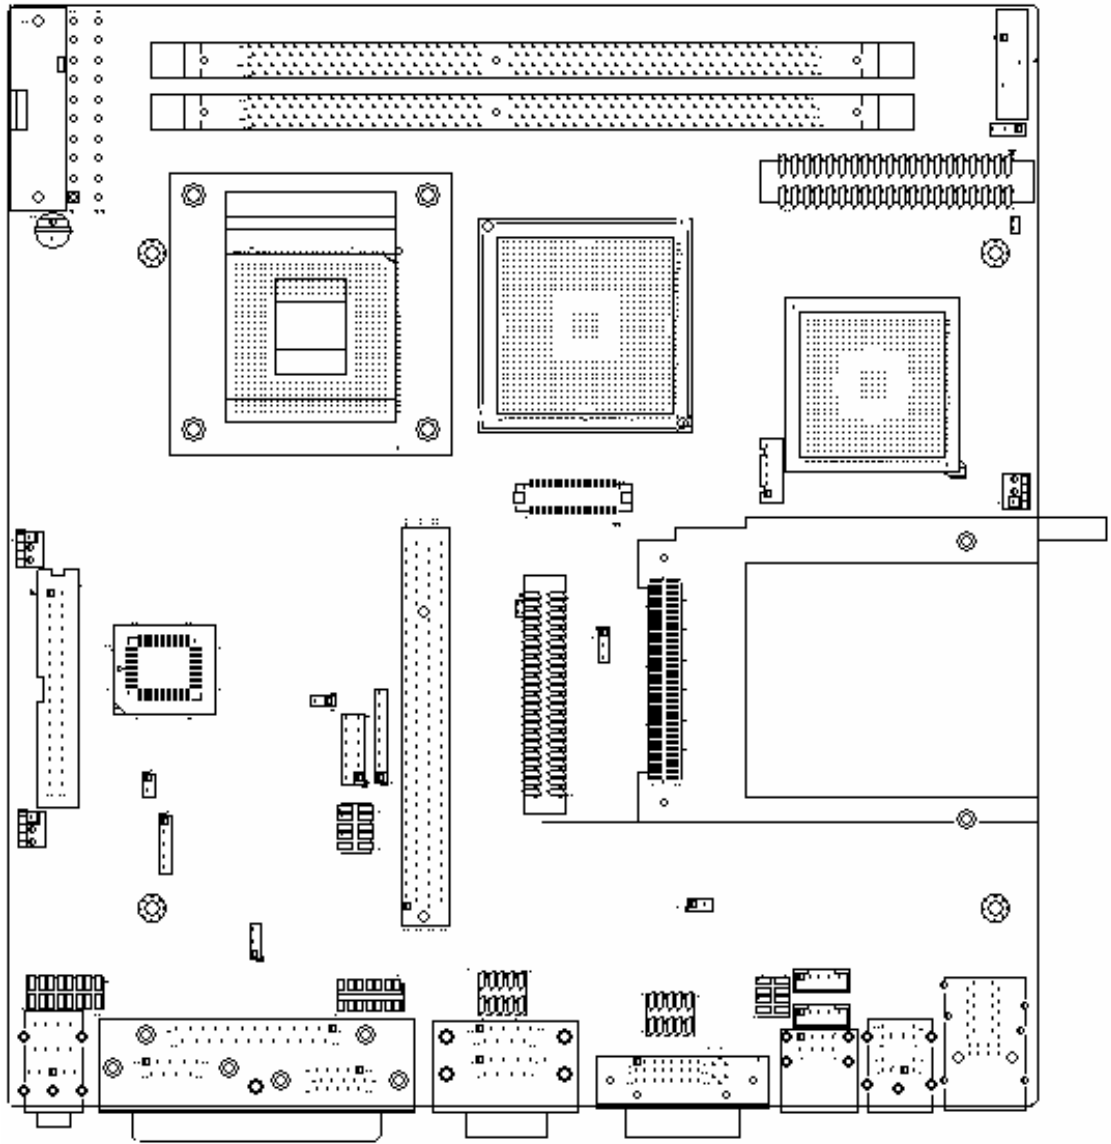


Figure 3-1. ICPMB-7570E Board Layout

Caution

Some components on ICPMB-7570E are very sensitive to static discharges. To protect it from unintended damage, be sure to follow these precautions:

1. Ground yourself to remove any static charge before touching your ICPMB-7570E. You can do it by using a grounded wrist strap at all times or by frequently touching any conducting materials that is connected to the ground.
2. Handle your ICPMB-7570E by its edges. Don't touch IC chips, leads or circuitry if not necessary.
3. Do not plug any connector or jumper while the power is on.
4. Do not put your ICPMB-7570E unprotected on a flat surface, as the board has components on both sides.

Jumper Settings

The following table lists the functions of all the jumpers on the 4117T. The following sections describe how to set jumpers on the ICPMB-7570 board.

Table 3-1. Jumper Functions

Label	Function
JP2	CMOS State Setting
JP4	CF Card Setting
JP5	LCD Voltage Setting
JP6	COM3 Mode RS-232 or RS-485 Setting

JP2: Clear CMOS Setup

If the CPU Card fails to boot due to improper BIOS settings, use this jumper to clear the CMOS data and reset the system BIOS information. To do this, use the jumper cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the “CMOS Settings Wrong” message displays during the boot up process, you may then try to correct the fault by pressing the F1 to enter the CMOS Setup menu. You may then do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After you have done one of the above, save your changes and exit the CMOS Setup menu.

JP2	DESCRIPTION
1 - 2	Normal
2 - 3	Clear CMOS

JP4: CF card setup

This jumper setting allows you to configure a CF card as either the slave or the master.

JP4	DESCRIPTION
Open	Slave(Default)
Close	Master

JP5: LCD voltage setup



WARNING:

Do not change this voltage. This voltage has been preset and is compatible with the currently installed 17" TFT LCD screen. If you change this jumper setting you may cause damage to the system.

This jumper sets the voltage for the LCD screen. This setting **MUST NOT** be changed.

JP5	DESCRIPTION
1-2	3.3V(Default)
2-3	5V

JP6: RS-232/485 Setup(for COM3)

This jumper allows you to configure the COM3 serial port as a RS-485 compatible serial communications port (must also connect an interface cable from a 4117T I/O plate to the 14 pin COM3 header).

JP6	DESCRIPTION
1-2	RS-232(Default)
2-3	RS-485

Connector Pin Outs

The following describes how to connect peripherals, switches and indicators to ICPMB-7570 board.

Peripheral Interface Connectors

The 4117T flat panel PC motherboard, the ICPMB-7570 comes with a number of peripheral interface connectors and configuration jumpers listed in Chapter 3. The pinouts for these connectors are listed below:

CN5: Front Panel Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1		2	
3		4	
5		6	
7	GND	8	LCD Rotate

CN9: DISC LED

PIN NO.	DESCRIPTION
1	+LED
2	-LED

CN12 : System Panel Connectors

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1-3	POWER LED	2-8	SPEAKER
5-7	PWR BUTTON	10-12	RESET
9-11	HDLED		

IDE1: Primary IDE Interface Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND
29	IDE DACK	30	GROUND– DEFAULT
31	INTERRUPT	32	N/C
33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND

IDE2: Secondary IDE Interface Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND
29	IDE DACK	30	GROUND– DEFAULT
31	INTERRUPT	32	N/C
33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND
41	VCC	42	VCC
43	GROUND	44	N/C

CN7: Compact Flash Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	VCC-IN CHECK1
2	DATA 3	27	DATA 11
3	DATA 4	28	DATA 12
4	DATA 5	29	DATA 13
5	DATA 6	30	DATA 14
6	DATA 7	31	DATA 15
7	HDC_CS0#	32	HDC_CS1
8	N/C	33	N/C
9	GROUND	34	IOR#
10	N/C	35	IOW#
11	N/C	36	VCC_COM
12	N/C	37	IRQ15
13	VCC_COM	38	VCC_COM
14	N/C	39	CSEL
15	N/C	40	N/C
16	N/C	41	HDD_RESET
17	N/C	42	IORDY
18	SA2	43	SDREQ
19	SA1	44	SDACK#
20	SA0	45	HDD_ACTIVE#
21	DATA 0	46	66DET
22	DATA 1	47	DATA 8
23	DATA 2	48	DATA 9
24	N/C	49	DATA 10
25	VCC-IN CHECK2	50	GROUND

FDD1 :FLOPPY CONNECTOR

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	DENSEL
3	GND	4	NC
5	NC	6	NC
7	GND	8	INDEX
9	GND	10	MTRA
11	GND	12	DRVB
13	GND	14	DRVA
15	GND	16	MTRB
17	GND	18	DIR
19	GND	20	STEP
21	GND	22	WDATA
23	GND	24	WGATE
25	GND	26	TRK0
27	GND	28	WPT
29	GND	30	RDATA
31	GND	32	SIDE1
33	GND	34	DSKCHG

CN1.A : Parallel Port Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	STROBE#	2	DATA 0
3	DATA 1	4	DATA 2
5	DATA 3	6	DATA 4
7	DATA 5	8	DATA 6
9	DATA 7	10	ACKNOWLEDGE
11	BUSY	12	PAPER EMPTY
13	PRINTER SELECT	14	AUTO FORM FEED #
15	ERROR#	16	INITIALIZE
17	PRINTER SELECT LN#	18	GROUND
19	GROUND	20	GROUND
21	GROUND	22	GROUND
23	GROUND	24	N/C
25	GROUND	26	

CN1.B : COM1 Connector(RS-232)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD1	2	DSR1
3	RX1	4	RTS1
5	TX1	6	CTS1
7	DTR1	8	RI1
9	GND	10	GND

CN1.C : CRT(15-pin Female Connector)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RED	9	NC
2	GREEN	10	GROUND
3	BLUE	11	NC
4	NC	12	DDCDAT
5	GROUND	13	HSYNC
6	GROUND	14	VSYNC

7	GROUND	15	DDCCLK
8	GROUND		

J5 (Dual DB-9 CONNECTOR): COM2,COM3(RS-232)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD2/3	2	DSR2/3
3	RX2/3	4	RTS2/3
5	TX2/3	6	CTS2/3
7	DTR2/3	8	RI2/3
9	GND	10	GND

COM3 : COM3(RS-232/485) (14-pin Pin Header, Shared with J5.Com3)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD3	2	DSR3
3	RX3	4	RTS3
5	TX3	6	CTS3
7	DTR3	8	RI3
9	GND	10	GND
11	TX3+	12	TX3-
13	RX3+	14	RX3-

COM4 : COM4(10-pin Pin Header, Shared with J5.Com3)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD4	2	DSR4
3	RX4	4	RTS4
5	TX4	6	CTS4
7	DTR4	8	RI4
9	GND	10	GND

KB_MS1 : PS/2 Keyboard & Mouse Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	KB DATA	7	MS DATA
2	NC	8	NC
3	GND	9	GND

4	5V	10	5V
5	KB CLK	11	MS CLK
6	NC	12	NC

USB1: USB(0~1) Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	USBVCC0	2	USBVCC1
3	D0-	4	D1-
5	D0+	6	D1+
7	USBGND0	8	USBGND1

USB2: USB(2~3) Connector(2*4 Pin header)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	USBVCC2	2	USBGND3
3	D2-	4	D3+
5	D2+	6	D3-
7	USBGND2	8	USBVCC3

USB3,USB4: USB(4~5) Connector(1*5 Pin header)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	USBVCC4
3	GND	4	D4+
5	D4-		

LAN1: DUAL RJ45 Connector

PIN NO.	Description	PIN NO.	Description
A1	MDIOA0+	B1	MDIOB0+
A2	MDIOA0-	B2	MDIOB0-
A3	MDIOA1+	B3	MDIOB1+-
A4	MDIOA1-	B4	MDIOB1-
A5	MDIOA2+	B5	NC
A6	MDIOA2-	B6	NC
A7	MDIOA3+	B7	NC-
A8	MDIOA3-	B8	NC
A9	NC	B9	NC
A10	NC	B10	NC
A11	LINK1000	B11	VCC
A12	LINK100	B12	LINK100

A13	ACT	B13	ACT
A14	LINK	B14	LINK
A15-17	GND	B15-17	GND

CN8: LCD LVDS Interface Connector

PIN NO.	Description	PIN NO.	Description
1	GND	2	GND
3	LVDS_Y3+	4	LVDS_Y3-
5	LVDS_CLK+	6	LVDS_CLK-
7	LVDS_Y2+	8	LVDS_Y2-
9	LVDS_Y1+	10	LVDS_Y1-
11	LVDS_Y0+	12	LVDS_Y0-
13	GND	14	GND
15	LVDSB_Y3+	16	LVDSB_Y3-
17	LVDSBCLK+	18	LVDSBCLK-
19	LVDSB_Y2+	20	LVDSB_Y2-
21	LVDSB_Y1+	22	LVDSB_Y1-
23	LVDSB_Y0+	24	LVDSB_Y0-
25	GND	26	GND
27	VCC_LCD	28	VCC_LCD
29	VCC_LCD	30	VCC_LCD

CN3: Inverter Power Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC12	2	VCC12
3	BKLT_EN	4	BKLT_ADJ
5	GND	6	GND

PW1: ATX Power Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PSON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PWR OK	18	-5V
9	5VSB	19	5V
10	12V	20	5V

DIO1: 8 Bits GPIO Connector

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC5
3	GPIO0	4	GPIO1
5	GPIO2	6	GPIO3
7	GPIO4	8	GPIO5
9	GPIO6	10	GPIO7

CPU_FAN1, SYS_FAN1, SYS_FAN2: Fan Connector

PIN NO.	DESCRIPTION
1	Fan Speed Detect
2	+12V
3	GND

CN11: Audio Connector (Shared With AUDIO1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Speaker out R	2	GND
3	Speaker out L	4	GND
5	Line out R	6	Line out L
7	GND	8	GND
9	Line in R	10	Line in L
11	GND	12	GND
13	NC	14	NC
15	MIC1/CEN OUT	16	LFE OUT

IR1: IR Interface

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC5	2	NC
3	IRRX	4	GND
5	IRTX	6	

AMI BIOS Setup

This section describes the AMI Setup program built into the ROM BIOS. The setup program allows users to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the Setup information when the power is turned off.

Warning

For Advanced Users Only – Changing settings in the BIOS to values other than the defaults may cause the computer to stop functioning correctly.

Starting Setup

The AMI BIOS is immediately activated when you first power on the computer. The BIOS reads the system information contained in the CMOS and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

1. By pressing immediately after switching the system on, or
2. By pressing the key when the following message appears briefly at the bottom of the screen during the POST (Power On Self Test).

Press DEL to enter SETUP.


If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to...


PRESS F2 TO CONTINUE, DEL TO ENTER SETUP

Using Setup

In general, you use the arrow keys to highlight items, press Enter to select, use the PgUp and PgDn keys to change entries, press F1 for help and press Esc to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Setup submenu: Main

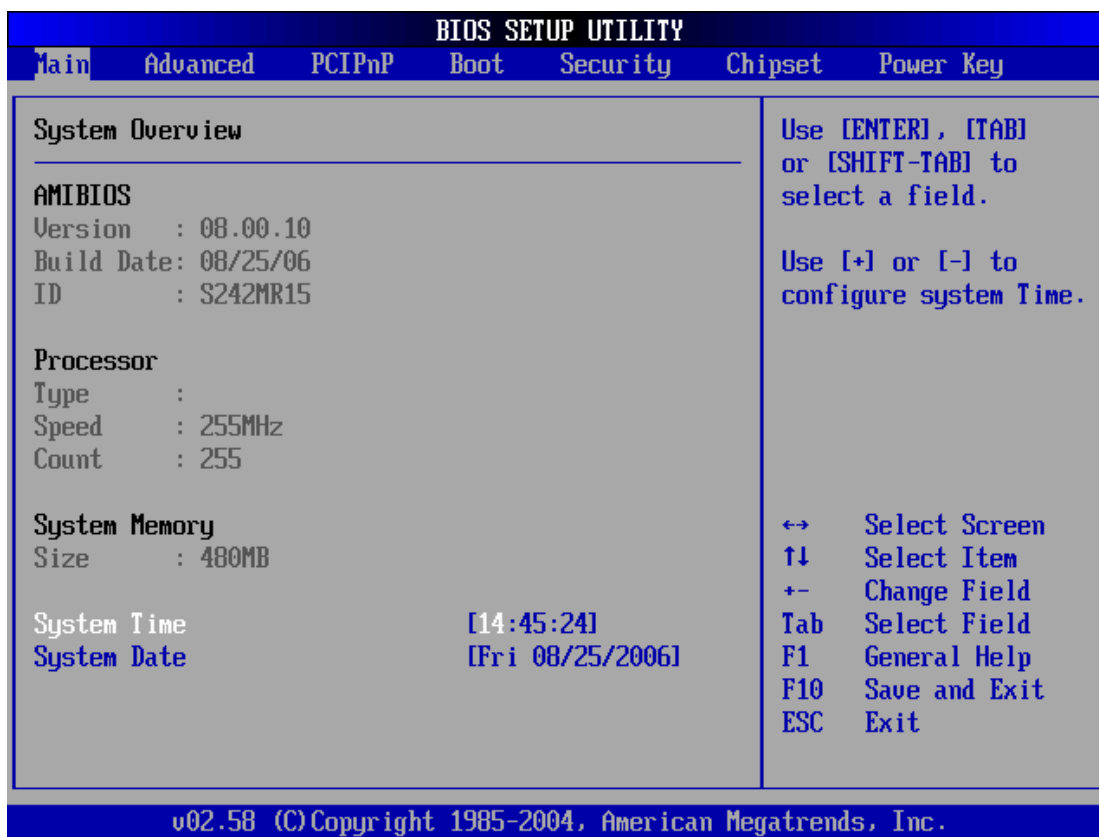

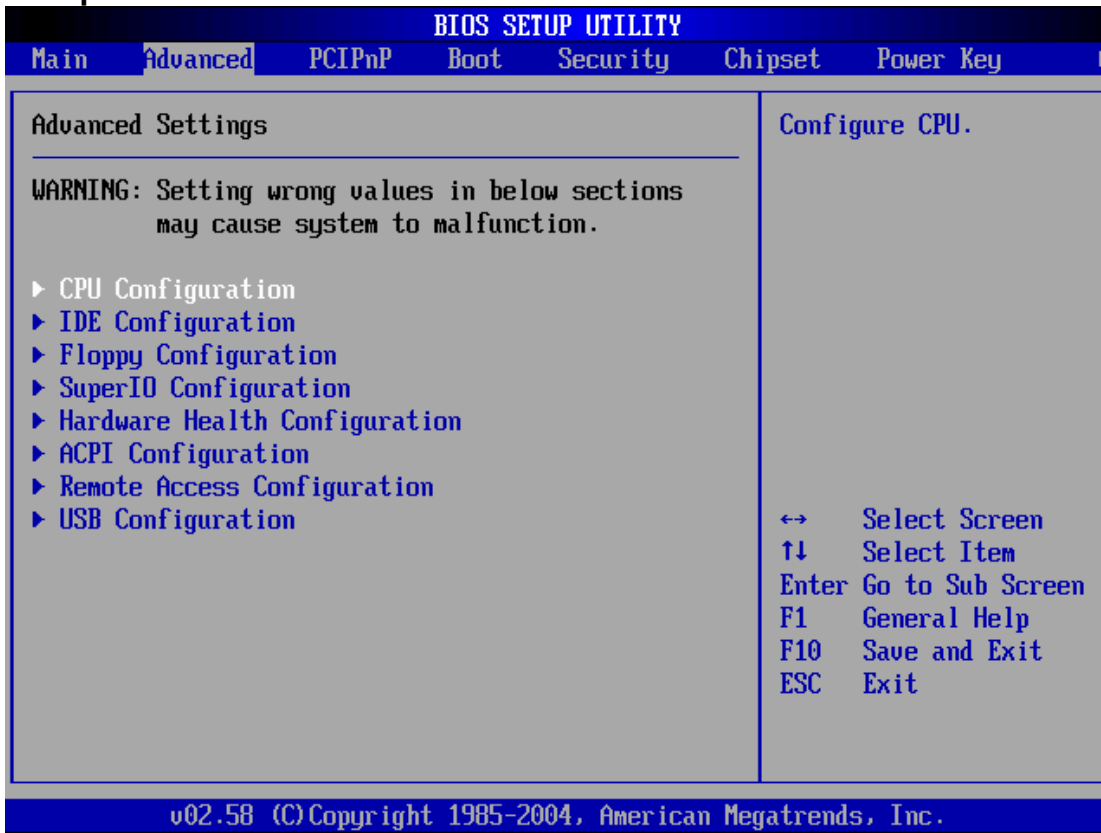
Setup submenu: Advanced**CPU Configuration**



Options summary

CPU TM function	Disable	Optimal Default, Failsafe Default
	<i>Enable</i>	
Intel(R) SpeedStep(tm) tech.	<i>Maximum Speed</i>	
	<i>Minimum Speed</i>	
	<i>Automatic</i>	Optimal Default
	<i>Disable</i>	Failsafe Default

IDE Configuration

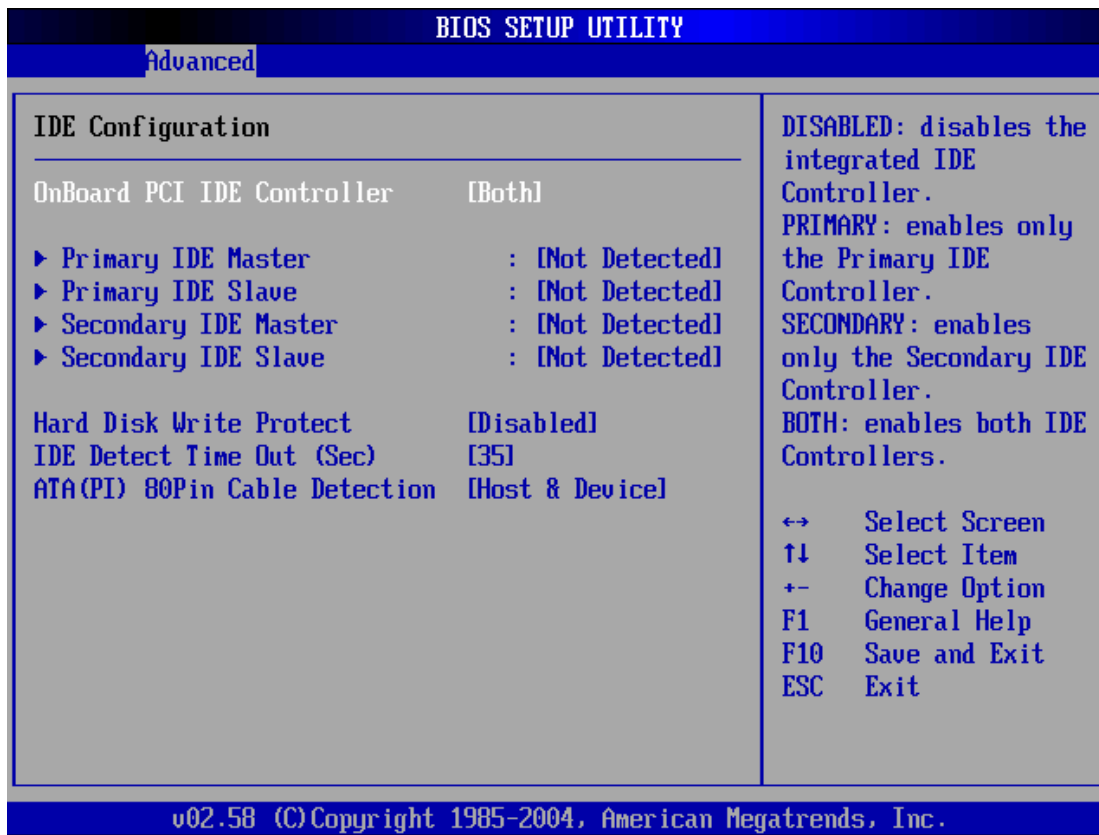


Options summary

OnBoard PCI IDE Controller	Disable	Optimal Default, Failsafe Default
	Primary	
	Secondary	
	Both	
Hard Disk Write Protect	Disable	Optimal Default, Failsafe Default
	Enable	
IDE Detect Time Out (Sec)	0	
	5	
	10	
	15	
	20	

	25	Optimal Default, Failsafe Default
	30	
	35	
ATA(P) 80Pin Cable Dtection	<i>Host & Device</i>	Optimal Default, Failsafe Default
	<i>Host</i>	
	<i>Device</i>	

Primary IDE Maser

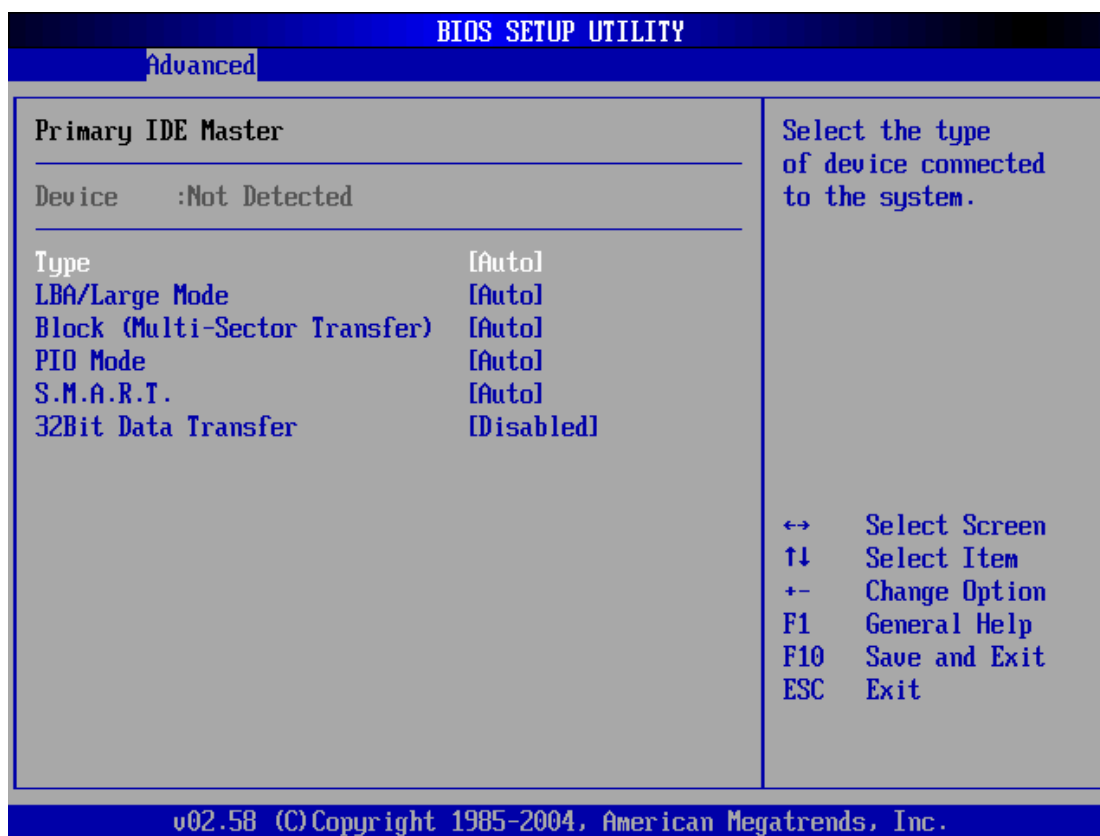


Options summary

Type	Not Installed	Optimal Default, Failsafe Default
	<i>Auto</i>	
	<i>CDROM</i>	
	<i>ARMD</i>	
<p>Select the type corresponding to the device present.</p> <p>Not Installed : No device</p> <p>Auto : Auto detected</p> <p>CDROM: ATAPI CDROM</p> <p>ARMD : ATAPI Removable Media Device</p>		
LBA/Large Mode	<i>Disabled</i>	Optimal Default, Failsafe Default
	<i>Auto</i>	
<p>Disabled: Disables LBA Mode.</p> <p>Auto: Enables LBA Mode if the device supports it and the device is not already formatted with LBA Mode disabled.</p>		
Block (Multi-Sector Transfer)	<i>Disabled</i>	Optimal Default, Failsafe Default
	<i>Auto</i>	
<p>Disabled: The Data transfer from and to the device occurs one sector at a time.</p> <p>Auto: The Data transfer from and to the device occurs multiple sectors at a time if the device supports it.</p>		
PIO Mode	<i>Auto</i>	Optimal Default, Failsafe Default
	<i>0</i>	
	<i>1</i>	
	<i>2</i>	
	<i>3</i>	
	<i>4</i>	
DMA Mode	<i>Auto</i>	Optimal Default, Failsafe Default
	<i>SWDMA0</i>	
	<i>SWDMA1</i>	

	<i>SWDMA2</i>	
	<i>MWDMA0</i>	
	<i>MWDMA1</i>	
	<i>MWDMA2</i>	
	<i>UDMA0</i>	
	<i>UDMA1</i>	
	<i>UDMA3</i>	
	<i>UDMA4</i>	
Select DMA Mode. Auto : Auto detected SWDMA n: SingleWord DMA n MWDMA n: MultiWord DMA n UDMA n : Ultra DMA n		
S.M.A.R.T.	<i>Auto</i>	Optimal Default, Failsafe Default
	<i>Disabled</i>	
	<i>Enabled</i>	
S.M.A.R.T. stands for "Self-Monitoring, Analysis and Reporting Technology".		
32Bit Data Transfer	<i>Disabled</i>	Optimal Default, Failsafe Default
	<i>Enabled</i>	


Floppy Configuration

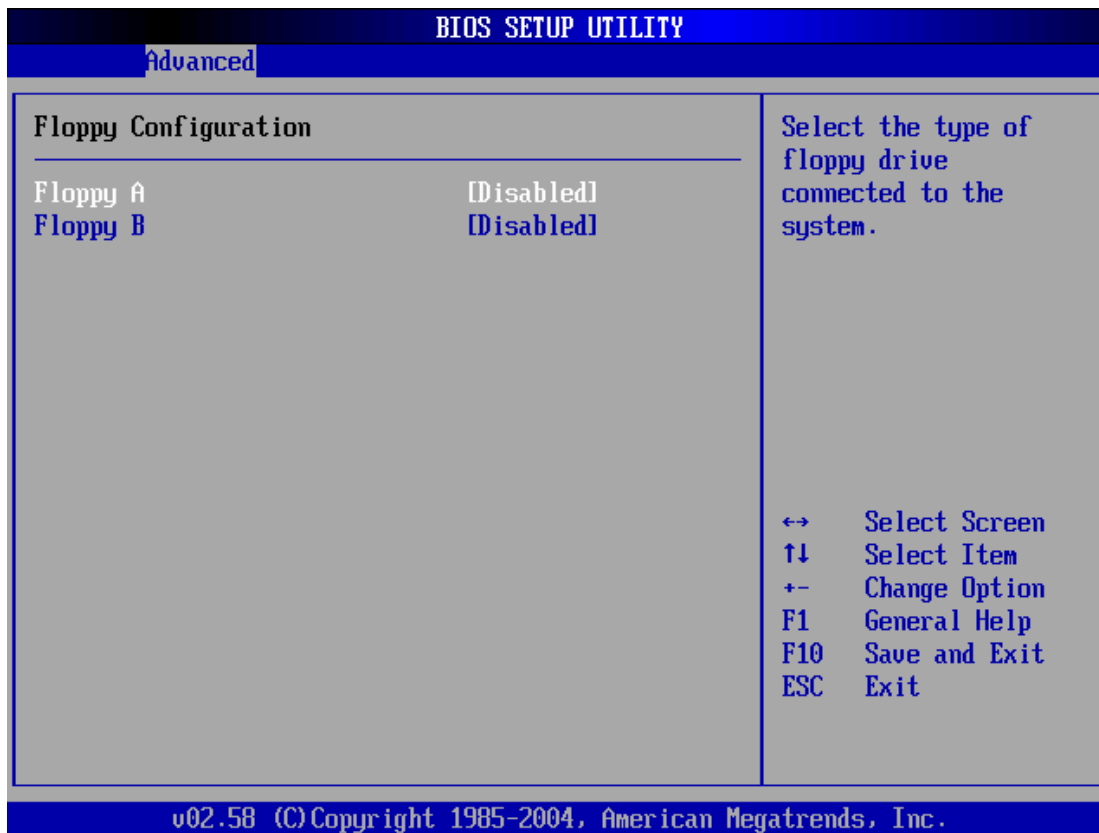

Options summary

Floppy A	Disabled	Optimal Default, Failsafe Default
	360 KB 5 ¹ / ₄ "	
	1.2 MB 5 ¹ / ₄ "	
	720 KB 3 ¹ / ₂ "	
	1.44 MB 3 ¹ / ₂ "	
	2.88 MB 3 ¹ / ₂ "	
Select the floppy drive type.		
** Support only Floppy A, no Floppy B.		

Super I/O Configuration

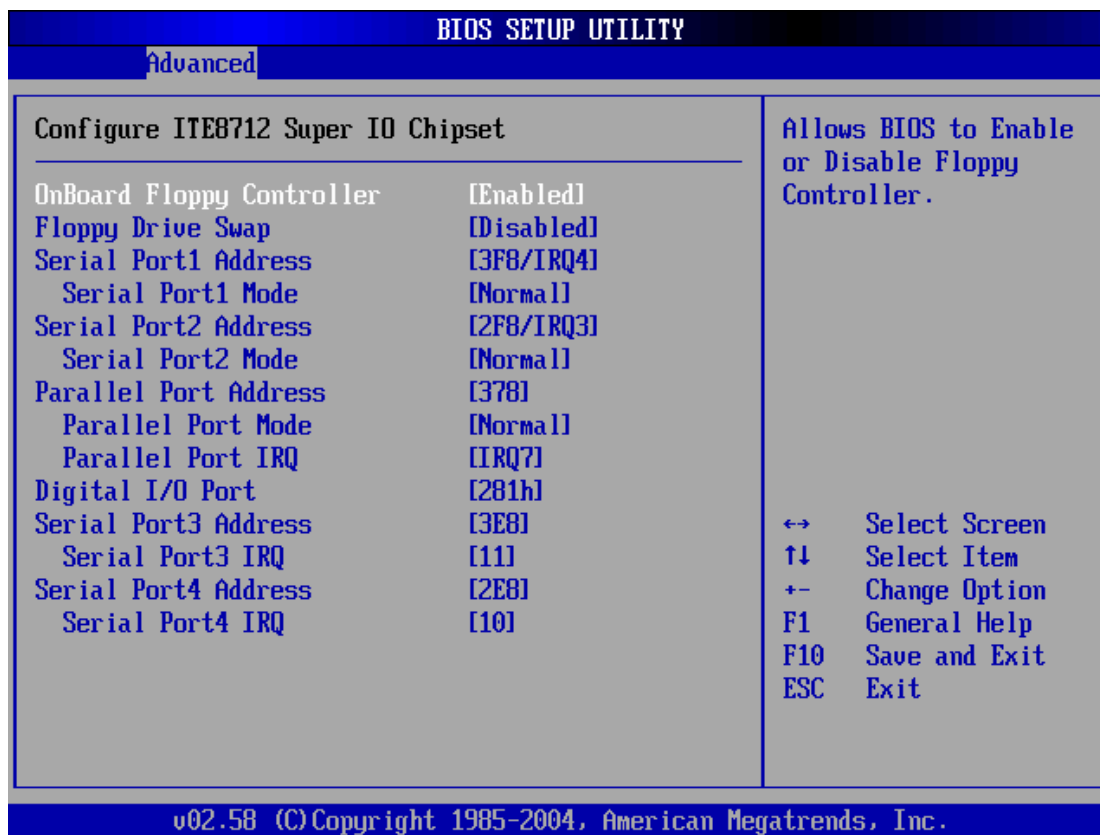

Options summary :

OnBoard Floppy Controller	<i>Enable</i>	Optimal Default, Failsafe Default
Floppy Driver Swap	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable</i>	**No Function
Serial Port1 Address	<i>3F8/IRQ4</i>	Optimal Default, Failsafe Default
	<i>3E8/IRQ4</i>	
	<i>2E8/IRQ3</i>	
Serial Port1 Mode	<i>Normal</i>	Optimal Default, Failsafe Default
	<i>IrDA</i>	
	<i>ASK IR</i>	
Serial Port2 Address	<i>2F8/IRQ3</i>	Optimal Default, Failsafe Default

	3E8/IRQ4	
	2E8/IRQ3	
Serial Port2 Mode	Normal	Optimal Default, Failsafe Default
	IrDA	
	ASK IR	
Parallel Port Address	378	Optimal Default, Failsafe Default
	278	
	3BC	
Parallel Port Mode	Normal	Optimal Default, Failsafe Default
	EPP	
	ECP	
	EPP+ECP	
Parallel Port IRQ	IRQ5	
	IRQ7	Optimal Default, Failsafe Default
Digital I/O port	201h	
	221h	
	241h	
	261h	
	281h	Optimal Default, Failsafe Default
Serial Port3 Address	3E8	Optimal Default, Failsafe Default
	2E8	
	2F0	
	2E0	
Serial Port3 IRQ	3	
	4	
	10	
	11	Optimal Default, Failsafe Default

Serial Port4 Address	3E8	
	2E8	Optimal Default, Failsafe Default
	2F0	
	2E0	
Serial Port5 IRQ	3	
	4	
	10	Optimal Default, Failsafe Default
	11	
Allows BIOS to Select Serial Port1 Base Addresses.		


H/W Health Configuration

BIOS SETUP UTILITY		
Advanced		
H/W Health Function	[Enabled]	Fan configuration mode setting
FAN 1 Mode Setting	[Full On mode]	
CPU Temperature	:35°C/95°F	
System Temperature	:34°C/93°F	
Power Temperature	:30°C/86°F	
CPU Fan Speed	:5113 RPM	
Power Fan Speed	:N/A	
System Fan Speed	:N/A	
CPU Core	:1.072 V	↔ Select Screen
+2.50V	:2.496 V	↑↓ Select Item
+3.30V	:3.280 V	+ - Change Option
+5.00V	:5.116 V	F1 General Help
+12.0V	:12.792 V	F10 Save and Exit
+1.50V	:1.440 V	ESC Exit
5VSB	:5.084 V	
VBAT	:3.120 V	
v02.58 (C) Copyright 1985-2004, American Megatrends, Inc.		

Options summary

H/W Health function	Disabled	Optimal Default, Failsafe Default
	<i>Enable</i>	
Fan 1 Mode Setting	<i>Full On Mode</i>	
	<i>Automatic mode</i>	
	<i>PWM Manually mode</i>	


Remote Access Configuration

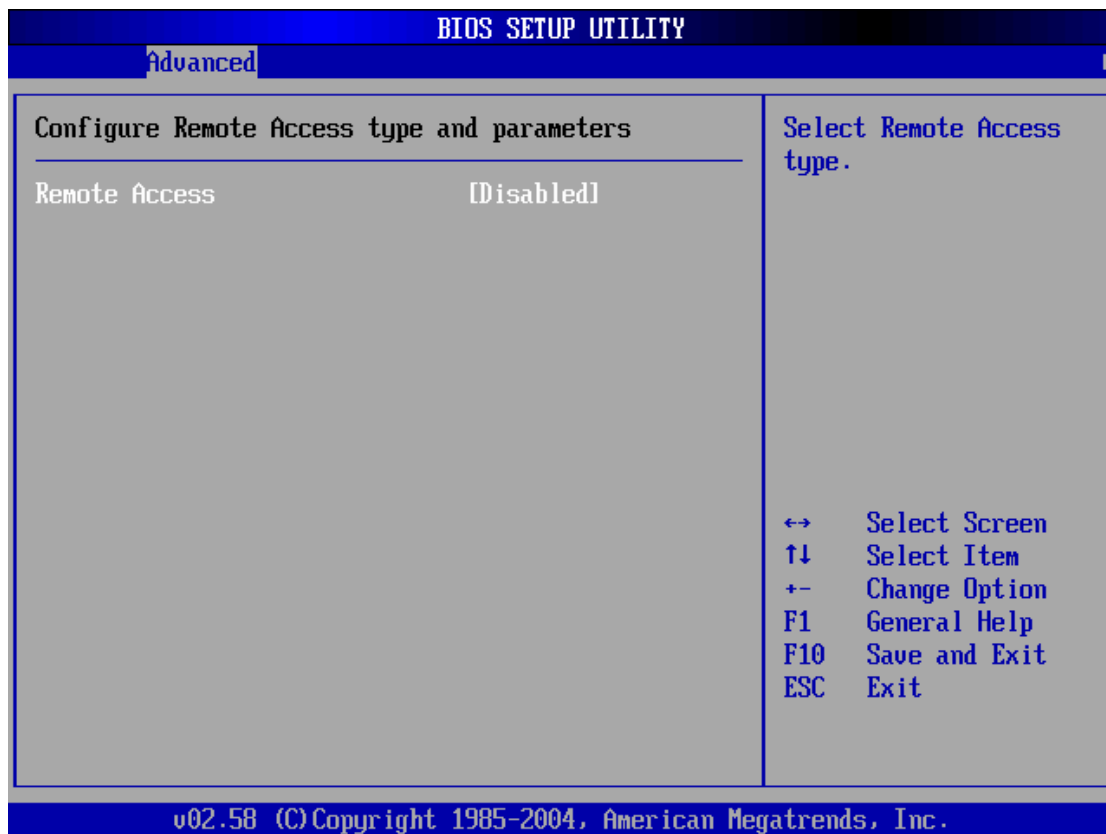

Options summary

Remote Access	Disabled	Optimal Default, Failsafe Default
	<i>Enable</i>	

USB Configuration

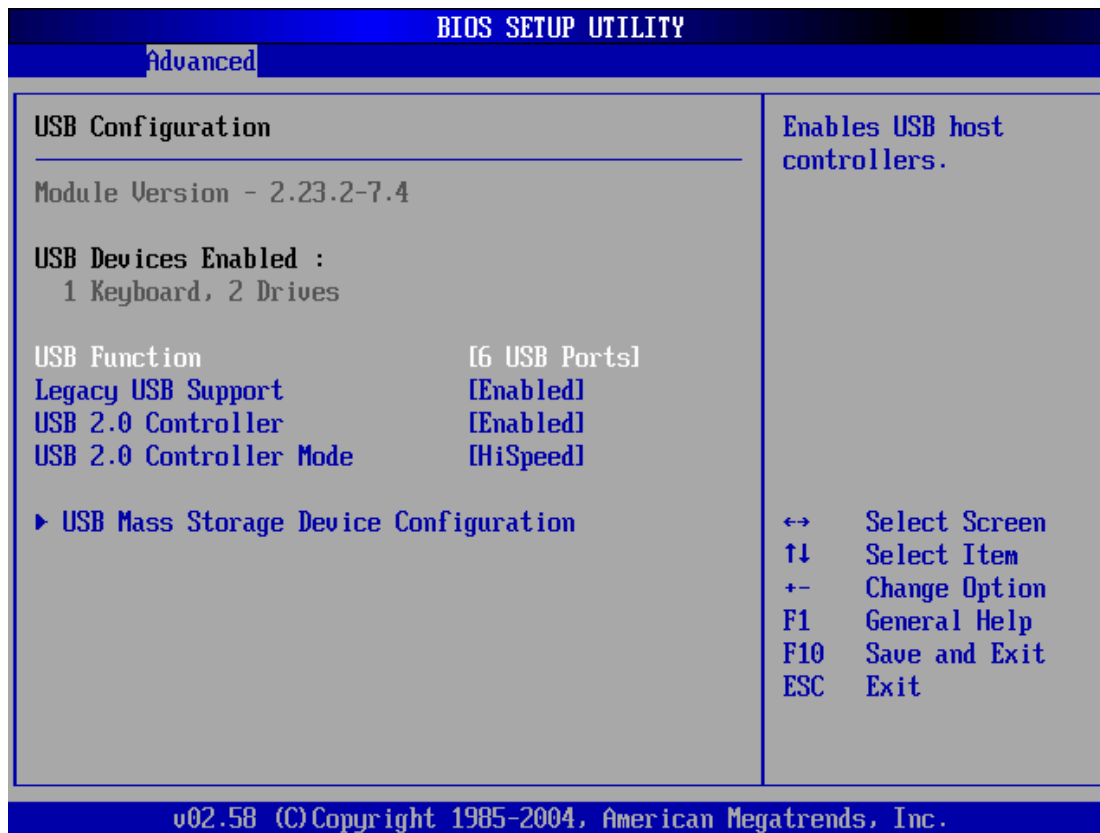

Options summary

USB function	Disabled	Optimal Default, Failsafe Default
	2 USB Ports	
	4 USB Ports	
	6 USB Ports	
Legacy USB Support	Disabled	Optimal Default, Failsafe Default
	Enable	
USB 2.0 Controller	Disable	Failsafe Default
		Enable
USB 2.0 Controller Mode	FullSpeed	** Only exist when enable USB 2.0 Controller
	HiSpeed	

Advanced PCI/PnP Settings

BIOS SETUP UTILITY

Main Advanced **PCIPnP** Boot Security Chipset Power Key

Advanced PCI/PnP Settings


WARNING: Setting wrong values in below sections may cause system to malfunction.

Plug & Play O/S	[No]
PCI Latency Timer	[32]
Allocate IRQ to PCI VGA	[Yes]
Palette Snooping	[Disabled]
PCI IDE BusMaster	[Disabled]
OffBoard PCI/ISA IDE Card	[Auto]
IRQ3	[Available]
IRQ4	[Available]
IRQ5	[Available]
IRQ7	[Available]
IRQ9	[Available]
IRQ10	[Available]
IRQ11	[Available]
IRQ14	[Available]

NO: lets the BIOS configure all the devices in the system.
 YES: lets the operating system configure Plug and Play (PnP) devices not required for boot if your system has a Plug and Play operating system.

↔ Select Screen
 ↑↓ Select Item
 +- Change Option
 F1 General Help
 F10 Save and Exit
 ESC Exit

v02.58 (C) Copyright 1985-2004, American Megatrends, Inc.

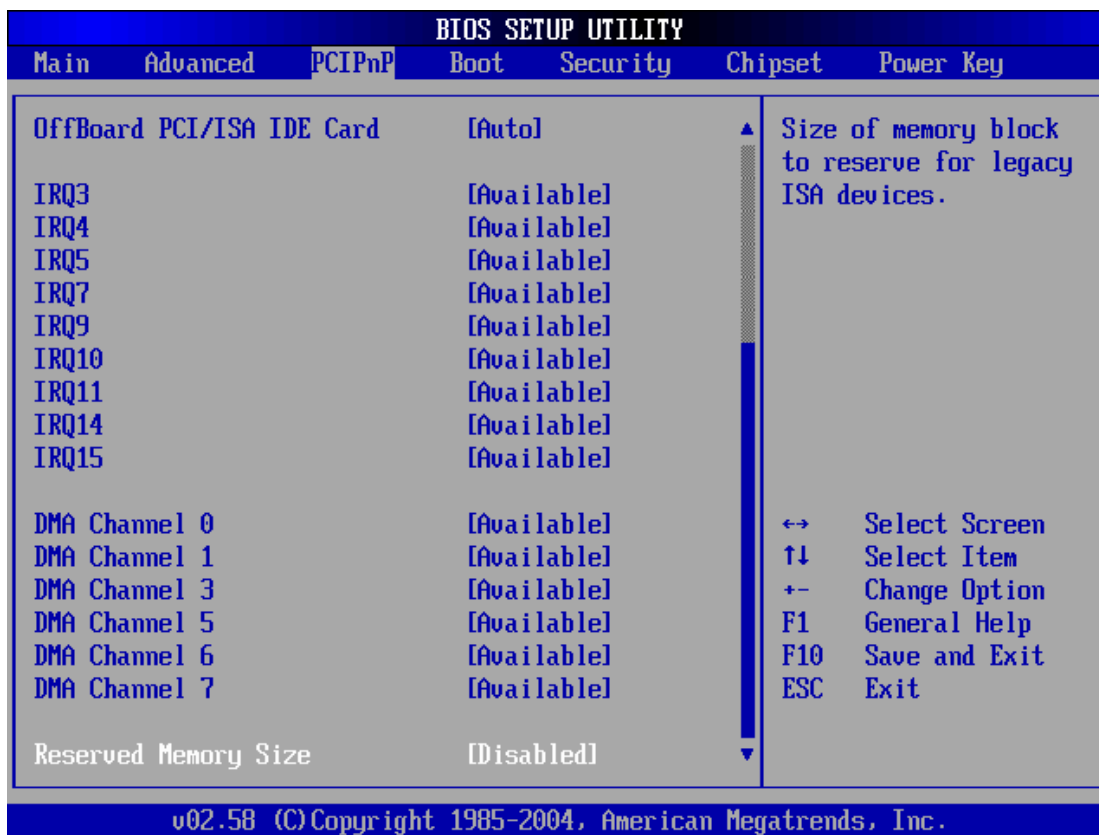


Options summary

<i>Plug & Play O/S</i>	No	Optimal Default, Failsafe Default
	Yes	
<i>PCI Latency Timer</i>	32	Optimal Default, Failsafe Default
	64	
	96	
	128	
	160	
	192	
	224	
	248	
<i>Allocate IRQ to PCI VGA</i>	Yes	Optimal Default, Failsafe Default
	No	

<i>Palette Snooping</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable</i>	
<i>PCI IDE BusMaster</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable</i>	
<i>OffBoard PCI/ISA IDE Card</i>	<i>Auto</i>	Optimal Default, Failsafe Default
	<i>PCI Slot1</i>	
	<i>PCI Slot2</i>	
	<i>PCI Slot3</i>	
	<i>PCI Slot4</i>	
	<i>PCI Slot5</i>	
	<i>PCI Slot6</i>	
<i>IRQ3</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ4</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ5</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ6</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ7</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ8</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ9</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>IRQ10</i>	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	

IRQ11	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
IRQ12	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
IRQ13	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
IRQ14	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
IRQ15	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
DMA Channel 0	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
DMA Channel 1	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
DMA Channel 3	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
DMA Channel 5	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
DMA Channel 6	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
DMA Channel 7	<i>Available</i>	Optimal Default, Failsafe Default
	<i>Reserved</i>	
<i>Reserved Memory Size</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>16k</i>	
	<i>32k</i>	
	<i>64k</i>	


Boot Settings

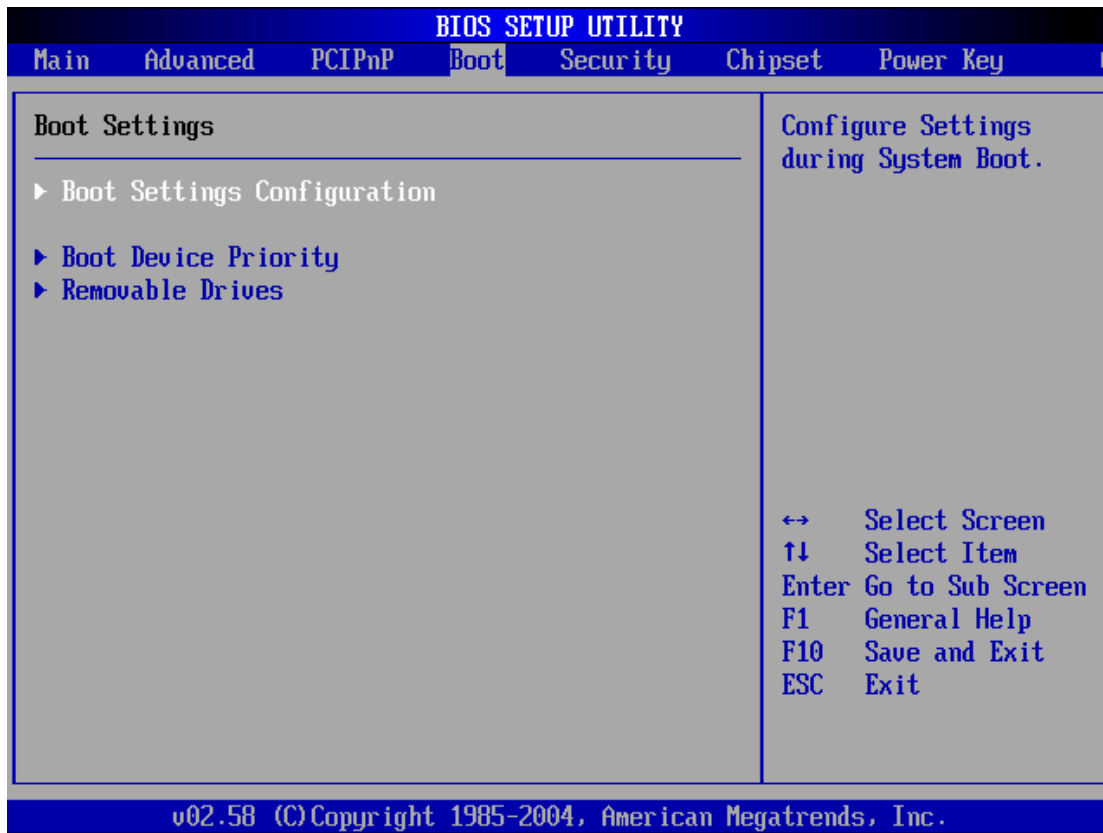

Note: Correction for Boot Settings screen capture above:

- Boot Settings Configuration
 - Boot Device Priority
 - Hard Disk Drives
 - CD/DVD Drives

Boot Settings Configuration

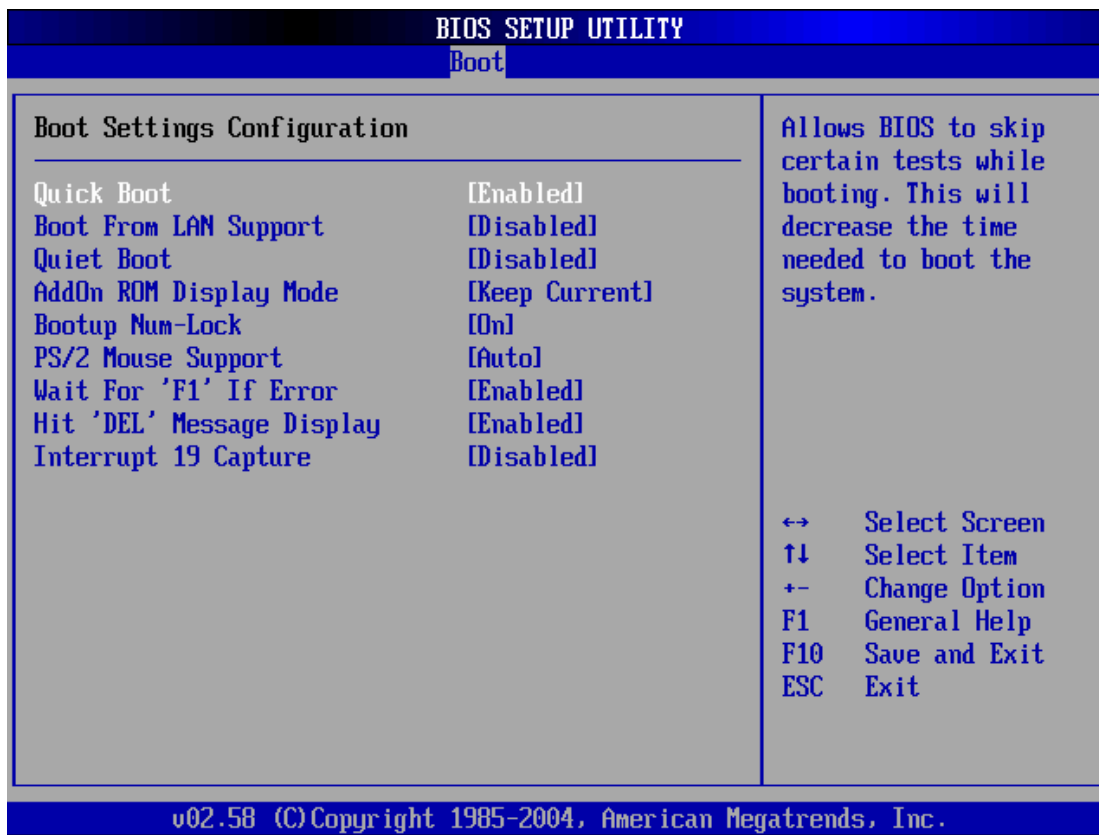


Options summary

Quick Boot	Enable	Optimal Default, Failsafe Default
	Disable	
Boot From LAN Support	Disable	Optimal Default, Failsafe Default
	Enable	
Quiet Boot	Disable	Optimal Default, Failsafe Default
	Enable	
AddOn ROM display Mode	Force BIOS	Optimal Default, Failsafe Default
	Keep Current	
Bootup Num-Lock	Off	Optimal Default, Failsafe Default
	On	
PS/2 Mouse Support	Disable	

	<i>Enable</i>	
	<i>Auto</i>	Optimal Default, Failsafe Default
<i>Wait For 'F1' If Error</i>	<i>Disable</i>	
	<i>Enable</i>	Optimal Default, Failsafe Default
<i>Hit 'DEL' Message Display</i>	<i>Disable</i>	
	<i>Enable</i>	Optimal Default, Failsafe Default
<i>Interrupt 19 Capture</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable</i>	

Security Settings

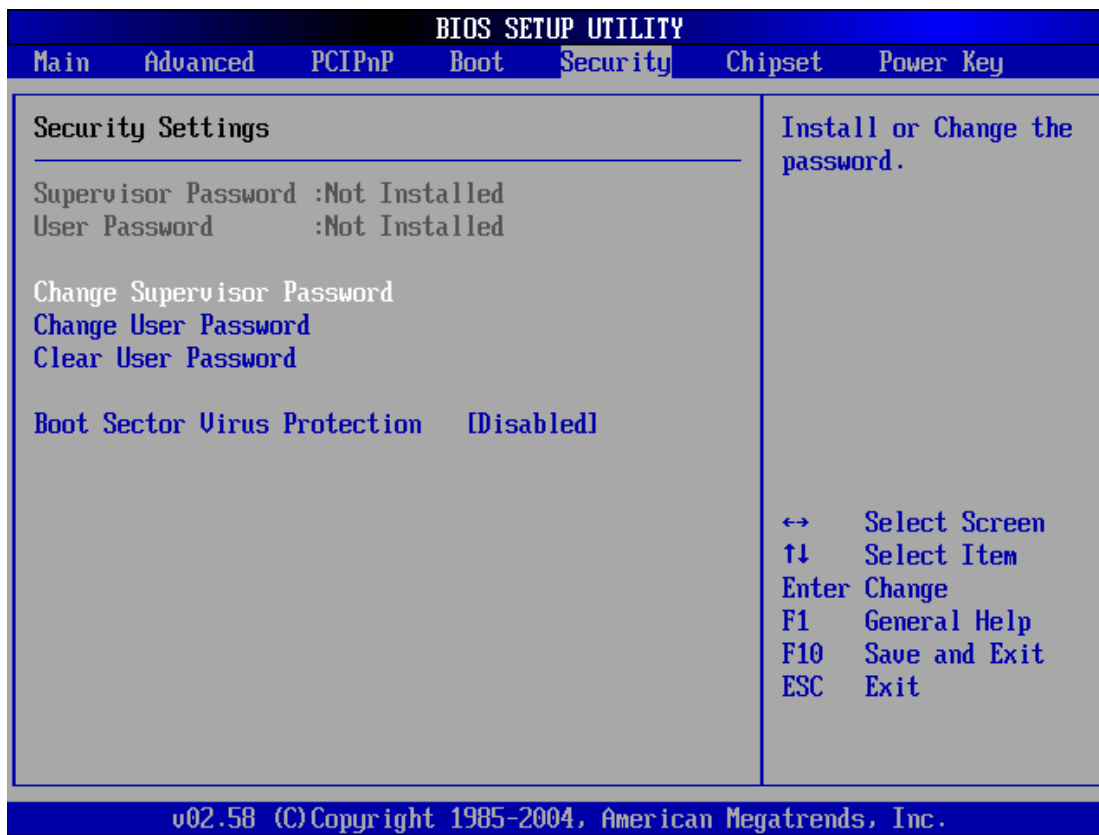

Options summary


Change Supervisor Password		
Change User Password		
<p>Change User/Supervisor Password You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.</p> <p>If you highlight these items and press Enter, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.</p>		
Clear User Password		
<p>Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.</p>		

<i>Boot Sector Virus Protection</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable</i>	

Advanced Chipset Settings



Northbridge Chipset Configuration

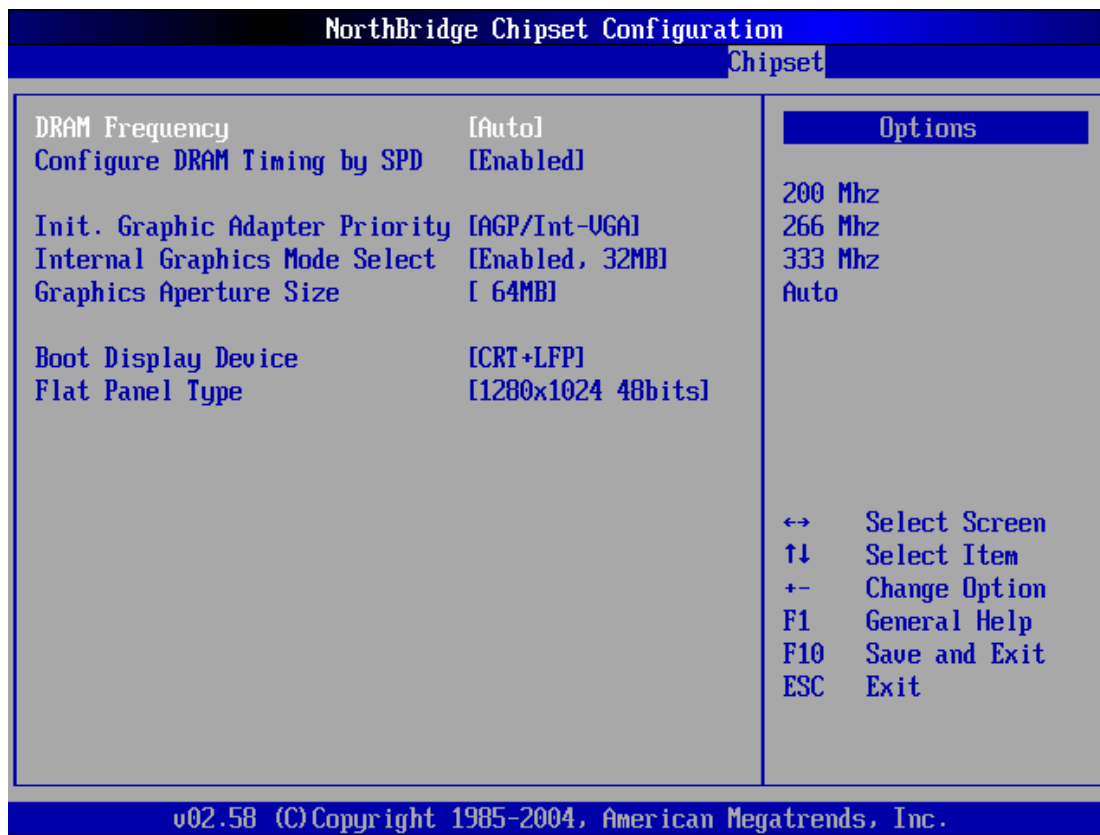

Options summary

DRAM Frequency	200 Mhz	Optimal Default, Failsafe Default
	266 Mhz	
	333 Mhz	
	Auto	
Configure DRAM Timing by SPD	Disable	Optimal Default, Failsafe Default
	Enable	
Init. Graphic Adapter Priority	Internal VGA	Optimal Default, Failsafe Default
	AGP/Int-VGA	
	AGP/PCI	
	PCI/AGP	
	PCI/Int-VGA	

<i>Internal Graphic Mode Select</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable, 1MB</i>	
	<i>Enable, 4MB</i>	
	<i>Enable, 8MB</i>	
	<i>Enable, 16MB</i>	
	<i>Enable, 32MB</i>	
<i>Internal Aperture Size</i>	<i>64MB</i>	Optimal Default, Failsafe Default
	<i>128MB</i>	
	<i>256MB</i>	
<i>Boot Display Device</i>	<i>CRT</i>	Optimal Default, Failsafe Default
	<i>EFP</i>	
	<i>LFP</i>	
	<i>CRT+EFP</i>	
	<i>CRT+LFP</i>	
<i>Flat Panel Type</i>	<i>640x480LVDS</i>	Optimal Default, Failsafe Default
	<i>800x600LVDS</i>	
	<i>1024x768LVDS 24bits</i>	
	<i>1280x1024LVDS</i>	
	<i>1400x1050LVDS</i>	
	<i>1024x768LVDS 18bits</i>	
	<i>1600x1200 48bits</i>	
	<i>1280x1024 48bits</i>	
	<i>800x600 24bits</i>	
	<i>800x600 18bits</i>	
	<i>1024x768 37bits</i>	


Southbridge Chipset Configuration

South Bridge Chipset Configuration		
		Chipset
OnBoard LAN1	[Enabled]	Disable/Enable OnBoard LAN1.
OnBoard LAN2	[Enabled]	
OnBoard AC'97 Audio	[Auto]	
Spread Spectrum Mode	[Enabled]	
		↔ Select Screen ↑↓ Select Item +- Change Option F1 General Help F10 Save and Exit ESC Exit
v02.58 (C) Copyright 1985-2004, American Megatrends, Inc.		

Options summary

OnBoard LAN1	Disabled	Optimal Default, Failsafe Default
	<i>Enable</i>	
OnBoard LAN2	Disabled	Optimal Default, Failsafe Default
	<i>Enable</i>	
OnBoard AC'97 Audio	Auto	Optimal Default, Failsafe Default
	<i>Enable</i>	
Spread Spectrum Mode	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>Enable</i>	

Power Key Configuration

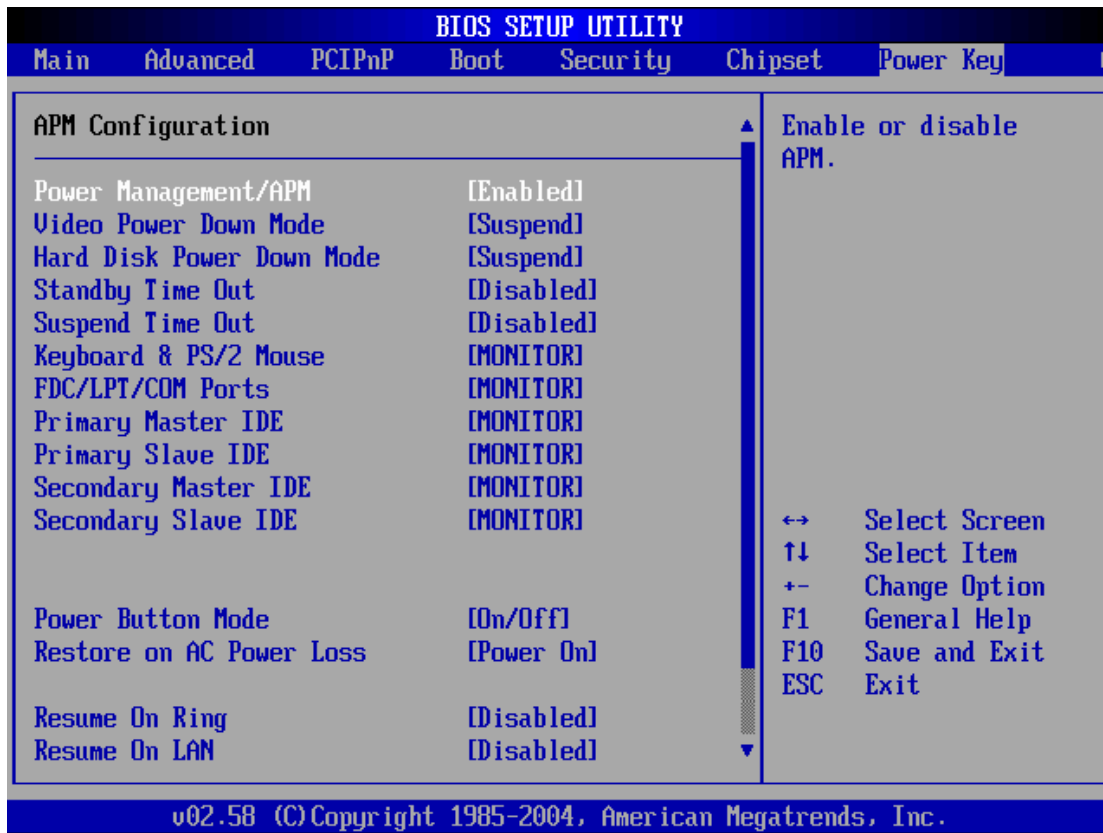




Options summary

Power Management/APM	Disabled	Optimal Default, Failsafe Default
	<i>Enable</i>	
Video Power Down Mode	<i>Disable</i>	Optimal Default
	<i>Standby</i>	Failsafe Default
	<i>Suspend</i>	
Hard Disk Power Down Mode	<i>Disable</i>	Optimal Default
	<i>Standby</i>	Failsafe Default
	<i>Suspend</i>	
Standby Time Out	<i>Disable</i>	Optimal Default, Failsafe Default
	<i>1 Min</i>	
	<i>2 Min</i>	
	<i>4 Min</i>	

	8 Min	
	10 Min	
	20 Min	
	30 Min	
	40 Min	
	50 Min	
	60 Min	
<i>Suspend Time Out</i>	<i>Disable</i>	Optimal Default, Failsafe Default
	1 Min	
	2 Min	
	4 Min	
	8 Min	
	10 Min	
	20 Min	
	30 Min	
	40 Min	
	50 Min	
	60 Min	
	<i>Keyboard & PS/2 Mouse</i>	<i>IGNORE</i>
<i>Monitor</i>		Optimal Default, Failsafe Default
<i>FDC/LPT/COM Ports</i>	<i>IGNORE</i>	
	<i>Monitor</i>	Optimal Default, Failsafe Default
<i>Primary Master IDE</i>	<i>IGNORE</i>	
	<i>Monitor</i>	Optimal Default, Failsafe Default
<i>Primary Slave IDE</i>	<i>IGNORE</i>	
	<i>Monitor</i>	Optimal Default, Failsafe Default
<i>Secondary Master IDE</i>	<i>IGNORE</i>	

	<i>Monitor</i>	Optimal Default, Failsafe Default
<i>Secondary Slave IDE</i>	<i>IGNORE</i>	
	<i>Monitor</i>	Optimal Default, Failsafe Default
<i>Power Button Mode</i>	<i>On/Off</i>	Optimal Default, Failsafe Default
	<i>Suspend</i>	
<i>Restore on AC Power Loss</i>	<i>Power Off</i>	
	<i>Power On</i>	
	<i>Last State</i>	Optimal Default, Failsafe Default
<i>Resume On Ring</i>	<i>Disable</i>	Optimal Default, Failsafe Default

Exit Options

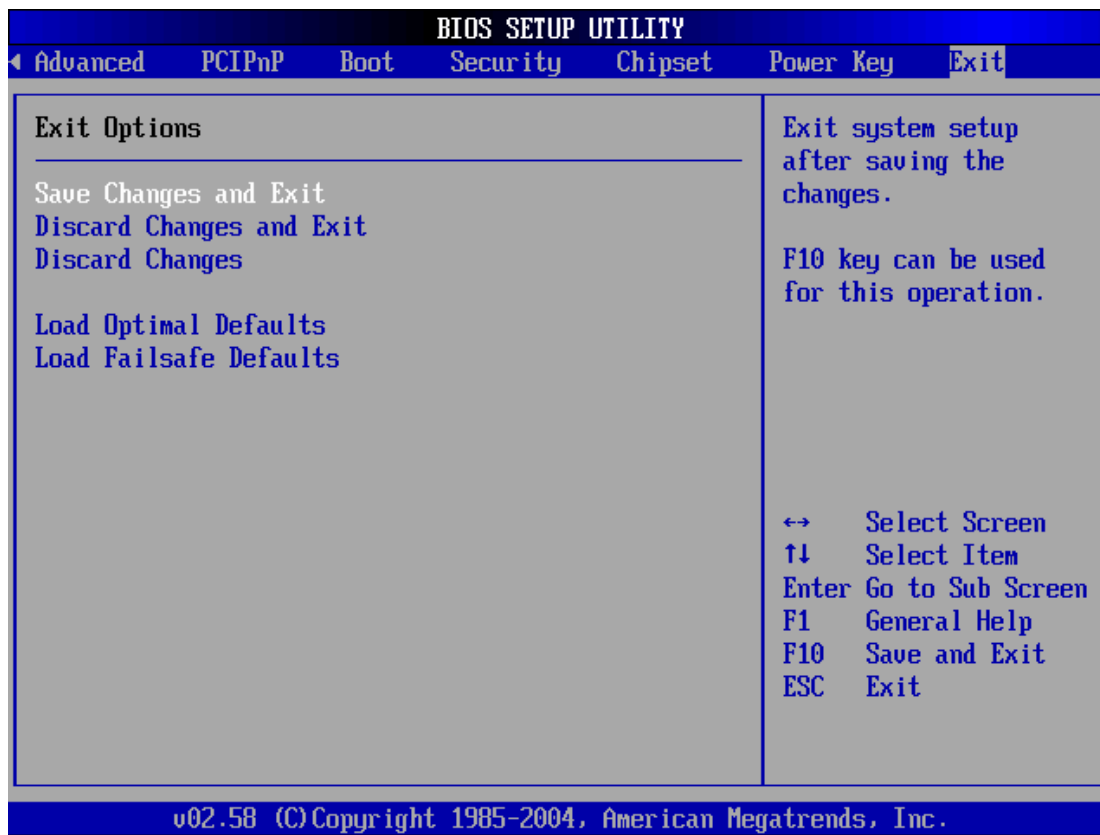

Options summary

Save Change and Exit	Highlight this item and press Enter to save any changes that you have made in the Setup utility and exit the Setup utility. When the Save Settings and Exit dialog box appears, select [OK] item to save the changes and exit, or press [Cancel] to return to the setup main menu. [F10] key can be used for this operation.
Discard Changes and Exit	Highlight this item and press Enter to discard any changes that you have made in the Setup utility and exit the Setup utility. When the Exit Discarding Changes dialog box appears, press [OK] to discard changes and exit, or press [Cancel] to return to the setup main menu. [ESC] key can be used for this operation.
Discard Changes	If you highlight this item and press Enter , a dialog box asks if you want to discard the settings changes for all the items in the Setup utility. Select the [OK] item to indicate Yes, and then press Enter to bypass the optimal settings changes

<i>Load Optimal Defaults</i>	If you highlight this item and press Enter , a dialog box asks if you want to install optimal settings for all the items in the Setup utility. Select the [OK] item to indicate Yes, and then press Enter to install the optimal settings. [F9] key can be used for this operation.
<i>Load Failsafe Defaults</i>	Load Failsafe Default values for all the setup questions. [F8] key can be used for this operation..

Chapter 4 – Maintenance

The 4117T is designed to withstand the harsh environment of the factory floor. Routine maintenance can help keep your system in good operating condition. Preventive maintenance consists of several basic procedures that will greatly reduce the chance of system malfunction. Schedule preventive maintenance along with the regular equipment maintenance to minimize down time.

General Preventive Maintenance

Here are some preventive measures you can take:

- Clean the monitor screen using a non-residue cleaner such as a mild window cleaning solution or CRT screen cleaner. Take care not to scratch the screen face.
- *Remove dust and dirt from PC components.* If dust builds up on heat sinks and circuitry, an obstruction of heat dissipation could cause the unit to malfunction. If dust reaches the electronic boards, a short circuit could occur.
- *Check the connections to I/O modules,* especially in environments where vibration could loosen the connections. Check to see that all plugs, sockets, terminal strips, and module connections are solid.
- *Remove unnecessary articles, such as drawings or manuals, from the unit.* They can obstruct airflow and create hot spots, which cause the system to malfunction.
- *Do not place noise-generating equipment near the 4117T unit.*

Fuse Replacement

The 4117T unit has no accessible fuse. Return the unit to the factory for fuse replacement.

Recommended Hard Drive Preventive Maintenance

Xycom Automation has recognized that hard drive failures may begin to increase an average of four to five years into the life of most computers used in industrial applications. Therefore, it is our recommendation as a preventive maintenance measure that all hard drives used in these types of applications be replaced at a two year interval to avoid any down time related to hard drive failure.

The purpose of this message is to merely bring this to our customer's attention, to offer alternative solutions, and to provide all of our customers with the excellent service they deserve.

Any questions regarding this issue may be directed to our support center at support@xycom.com.

Please note: Xycom recommends frequent backups of your hard drive, especially before beginning preventive maintenance procedures.

Product Repair Program / Returning a Unit to Xycom Automation

Xycom Automation's Product Repair & Customization Department (PR&C) restores equipment to normal operating condition and implements engineering changes that enhance operating specifications. Xycom Automation tests products returned to Xycom with the standard Xycom test diagnostics.

Note

Before sending the unit in for repair, back up the hard drive in case Xycom needs to restore the hard drive to the factory default O/S load.

Follow the steps below to prepare the unit for shipment:

1. Obtain an Return Merchandise Authorization (RMA) number for your unit by visiting the Xycom RMA Request web page and fill out the online request form:

<http://www.xycom.com/rma/>

If you cannot fill out the online form, there is an RMA Request Form Document that can be downloaded and either E-mailed (customercare@xycom.com) or Faxed (734-429-1010) to the Xycom Customer Support Team.

If you have difficulty then please call the Xycom Customer Support Team at (734) 944-0482).

2. Please have the following information:
 - Company name, shipping and billing address
 - Type of service desired: product repair or product exchange
 - Product model number, part number, quantity, serial number(s), and warranty status
 - Failure mode and failure systems
 - Purchase order number or repair order number
3. Make sure the front panel assembly is properly attached to the unit.
4. Attach failure information to the unit to speed processing.
5. Place the unit securely in its original packaging or an equivalent heavy-duty box.
6. Mark the RMA number on your purchase order and on the outside of the box.
7. Send the unit to the address given when you receive your RMA number.

Chapter 5 – Troubleshooting

Diagnostic Testing

If you suspect that you are having hardware problems with your 4117T, you can use the Xycom diagnostic utility to check out the PC's various ports and subsystems. The diagnostic utility is on the Documentation and Support Library CD that was included with the your unit.

The first step is to create a diagnostic diskette. The following steps can be done on any computer with a CD-ROM drive:

1. Create a DOS-bootable diskette
2. Create a temporary folder on the computer hard drive
3. There is a self-extracting zip file on the Documentation and Support Library CD located in:

DRIVERS\utility\xydiag


Run that program and extract the files to the temporary folder you just created.

4. Copy the extracted files onto the DOS-bootable diskette.


When you have created the diskette, insert it into an external floppy drive, connect it to the 4117T and re-boot the unit. The menu in Figure 5–2, *Main Menu*, will appear following boot-up. Additional information on the tests is included in the .txt files on the diskette.

Perform the following steps **before** starting the system tests:

1. Place the CPU board jumpers and switches to the factory set positions.
2. Plug the female end of the AC power cable into the side of the unit and the male end into a properly grounded outlet.
3. Connect the serial loopback connector(s) and the printer cable to the appropriate connectors, and connect a PC/AT or PS/2 keyboard. Figure 5–1, *Serial Loopback Connections*, illustrates the wiring necessary for the loopback connection.
4. Default the CMOS setup to the factory settings.

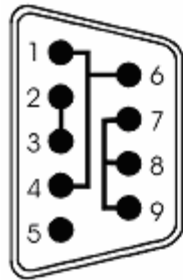

Com 1 RS-232
Serial Loopback
Connections

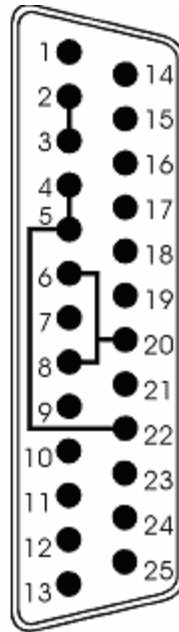

Com 2 RS-232
Serial Loopback
Connections

Figure 5-1. Serial Loopback Connections

Running the Tests

To run the test, insert the diagnostics disk into drive A. Turn on the computer (the diagnostics program will boot-up). Figure 5–2 shows the Main Menu.

Copyright 2002, Xycom, Inc. All rights reserved.	
Diagnostic Tests Sequence/Selection Menu (Rel. xx)	
1. WILL pause on error	5. Auto-select tests
2. SINGLE PASS test mode	6. Deselect all tests
3. Save setup to file	7. Quit and exit to DOS
4. Extract setup from a file	8. Return to previous screen
A) RAM Test	K) Video Interface Test
B) Video RAM Test	L) Speaker Port Test
C) Extended RAM Test	M) LPT1: Printer Port Test
D) Real Time Clock Test	N) LPT2: Printer Port Test
E) COM1 Serial Port Test	O) C: Hard Drive Interface Test
F) COM2 Serial Port Test	P) D: Hard Drive Interface Test
G) COM3 Serial Port Test	Q) A: Floppy Drive Interface Test
H) COM4 Serial Port Test	R) B: Floppy Drive Interface Test
I) Math Coprocessor Test	S) Keyboard, Keypad Tests
J) Video Adjustments Test	≡ = Test Selected
[ENTER]=START TESTING	
Use the letters to move the cursor and select/deselect, or use the arrow keys to move, then use the [SPACE] key to select/deselect a test or function.	

Figure 5-2. Main Menu

Note

Please read the DIAG.TXT file on the diagnostics disk for detailed information about the tests.

Note

Avoid repeated running of any hard disk diagnostic utility if you use the Solid State (Flash) drive option. The Flash drive has a limited number of writes to each logical sector. Repeated writes from a diagnostic utility will prematurely shorten the life of the drive.

Reinstalling Operating Systems

The 4117T CPU ships with Windows 2000 or Windows XP Professional operating systems installed. If you want to install a different operating system, refer to that operating system's manual for directions.

Note

If you need to reinstall the Windows 98, Windows 2000, Windows NT, or Windows XP Professional operating system, you must have an internal CD-ROM drive or an external parallel port CD-ROM drive. Windows NT and Windows XP ship only on CD-ROM.

Windows® 2000 Reinstallation

If you need to reinstall the Windows 2000 operating system, refer to the *Xycom Recovery for Xycom Automation Windows 2000 Workstation* (shipped with systems preinstalled with Windows 2000). This document is devoted to the reinstallation of your Windows 2000 operating system and drivers utilizing the Recovery Media provided with your Xycom Automation industrial computer.

Note

This procedure assumes that the computer hard disk drive has been completely corrupted or replaced.

Warning

This procedure will destroy data that may exist on the hard disk drive.

Windows XP® Reinstallation

If you need to reinstall the Windows XP Professional operating system, refer to the *Windows XP Professional CD-ROM* (shipped with systems preinstalled with Windows XP Professional).

Note

This procedure assumes that the computer hard disk drive has been completely corrupted or replaced.

Warning

This procedure will destroy data that may exist on the hard disk drive.

If you want to install a new operating system or reinstall a current operating system, refer to the operating system's manual for directions.

Installing Drivers

This section describes how to install the drivers associated with the system.

Note

For further assistance, call Xycom Automation technical support at 734-944-0482.

Video Drivers

Video drivers and the expansion utilities are on the Documentation and Support Library CD included with the documentation kit.

Choose the video driver for your operating system from the following directory on the Documentation and Support Library CD:

\DRIVERS\VIDEO\INTEL\855GME

Touch Screen Drivers

If you have a touch screen driver that has been factory installed, you will also receive, pre-loaded and at no extra charge: Windows 2000, and Windows XP Professional touch screen drivers.

Note

If you ordered a system pre-loaded with an operating system, the touch screen driver was pre-installed.

You must install the corresponding touch screen driver software if you change the operating system. The touch screen drivers are located on the Document and Support Library CD under:

\\DRIVERS\TOUCHSCREEN\TOUCHKIT

Miscellaneous Drivers

Refer to your operating system and peripheral manuals for information on installing drivers related to these items.

Note

If you ordered a system with Windows pre-loaded, you may have to purchase and install an external parallel port CD-ROM drive, or order your system with a CD-ROM drive pre-installed, to be able to install Windows drivers. The Windows operating system ships only on CD-ROM.

Appendix A Technical Specifications

This section contains the hardware and environmental specifications for the 4117T.

Hardware Specifications

The following table lists the hardware specifications for the 4117T.

Table A - 1. Hardware and Compliance Specifications

Characteristic	Specification
Mechanical	
Height	13.99" (355.25 mm)
Width	17.79" (451.614 mm)
Depth	5.32" (135.20 mm) overall 4.94" (125.41 mm) behind front panel 0.385" (9.79 mm) front panel protrusion
Weight	21.3 lbs (9.66 kg)
Electrical	
AC	100-240 VAC 50\60 Hz 1.0A 95W *Nominal
Power Supply	200 watts
Mounting	Panel mount or 19" rack mount
Flat Panel	17" TFT active color display
Agency Approvals	UL 508 (Listed), E300525 cUL CSA C22.2, No. 142 (Listed), E300525
Regulatory Compliance	FCC 47 CFR, Part 15, Class A CE EMI EN55022, Class A IMMUNITY EN61000-6-2 SAFETY IEC60950-1 HARMONICS EN61000-3-2, Class A FLICKER EN61000-3-3
ROHS	Compliant

* Nominal Power is measured for a base configuration only. Any additional expansion and/or devices will increase the input power required.

Environmental Specifications

Table A-2 lists the environmental and compliance specifications for the 4117T.

Table A-2. Environmental Specifications

Temperature	Operating	0°C to 50°C (32°F to 122°F)
	Non-operating	-20°C to 60°C (-4°F to 140°F)
Humidity	Operating	20% to 80% RH, non-condensing
	Non-operating	5% to 95% RH, non-condensing
Shock ¹	Operating	15g peak acceleration, 11 msec duration
	Non-operating	30g peak acceleration, 11 msec duration
Vibration (5-2000 Hz) ¹	Operating	0.006" peak to peak displacement 1.0g maximum acceleration
	Non-operating	0.015" peak to peak displacement 2.5g maximum acceleration
Altitude ²	Operating	Sea level to 10,000 ft. (3,000 m)
	Non-operating	Sea level to 40,000 ft. (12,000 m)

¹ These values are with solid state hard drives and not rotating media drives.

² Consistent with internal component specifications.

Appendix B – Power-On Self-Test Messages

POST Messages

During the Power-On Self-Test (POST) if the BIOS detects an error, it will either sound a beep code or display a message.

If a message is displayed, it will be accompanied by:

PRESS F1 TO CONTINUE, CTRL-ALT-ESC OR DEL TO ENTER SETUP

POST Beep

There are two kinds of beep codes in BIOS:

Single long beep followed by three short beeps—This code indicates that a video error has occurred and the BIOS cannot initialize the video screen to display any additional information.

Repeating long beep—This code indicates that a DRAM error has occurred.

Error Messages

One or more of the following messages may be displayed if the BIOS detects an error during the POST. This list includes messages for both the ISA and the EISA BIOS.

Table B-1. Error Messages

Error Messages	Cause/Solution
CMOS BATTERY HAS FAILED	CMOS battery is no longer functional. It should be replaced.
CMOS CHECKSUM ERROR	Checksum of CMOS is incorrect. A weak battery may have caused this error; replace if necessary. It may also indicate that CMOS has become corrupt.
DISK BOOT FAILURE, INSERT SYSTEM DISK AND PRESS ENTER	No boot device was found. This could mean that either a boot drive was not detected or the drive does not contain proper system boot files. Insert a system disk (formatted as a boot device) into Drive A: and press Enter. If you assumed the system would boot from the hard drive, make sure the controller is inserted correctly and all cables are properly attached, then reboot the system.
DISKETTE DRIVES OR TYPES MISMATCH ERROR - RUN SETUP	Type of diskette drive installed in the system is different from the CMOS definition. Run Setup to reconfigure the drive type correctly.
DISPLAY SWITCH IS SET INCORRECTLY	The display switch on the motherboard is set to a different setting than indicated in Setup. Determine which setting is correct and then either turn off the system and change the jumper, or enter Setup and change the VIDEO selection.
DISPLAY TYPE HAS CHANGED SINCE LAST BOOT	Since the last powering off the system, the display adapter has been changed. You must configure the system for the new display type.

Error Messages	Cause/Solution
EISA CONFIGURATION CHECKSUM ERROR PLEASE RUN EISA CONFIGURATION UTILITY	The EISA non-volatile RAM checksum is incorrect or cannot correctly read the EISA slot. This can indicate either the EISA non-volatile memory has become corrupt or the slot has been configured incorrectly. Verify the card is installed firmly in the slot. When this error appears, the system will boot in ISA mode allowing you to run the EISA Configuration Utility.
EISA CONFIGURATION IS NOT COMPLETE PLEASE RUN EISA CONFIGURATION UTILITY	The slot configuration information stored in the EISA non-volatile memory is incomplete. When this error appears, the system will boot in ISA mode allowing you to run the EISA Configuration Utility.
ERROR ENCOUNTERED INITIALIZING HARD DRIVE	Check that the adapter is installed correctly and all cables are firmly attached. Verify that the correct hard drive type is selected in Setup.
ERROR INITIALIZING HARD DISK CONTROLLER	See the cord is correctly and firmly installed in the bus. Verify the correct hard drive type is selected in Setup. Check jumper settings on the hard drive.
FLOPPY DISK CNTRLR ERROR OR NO CNTRLR PRESENT	Make sure the controller is installed correctly and firmly. If there are no floppy drives installed, be sure the Diskette Drive selection in Setup is set to NONE.
INVALID EISA CONFIGURATION PLEASE RUN EISA CONFIGURATION UTILITY	The non-volatile memory containing EISA configuration information was programmed incorrectly or has become corrupt. The system will boot in ISA mode allowing you to run the EISA Configuration Utility and correctly program the memory.
KEYBOARD ERROR OR NO KEYBOARD PRESENT	Make sure the keyboard is attached correctly and no keys are being pressed during the boot. If you are purposely configuring the system without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD. This will cause the BIOS to ignore the missing keyboard and continue the boot.
KEYBOARD IS LOCKED OUT - UNLOCK THE KEY	BIOS detected the keyboard is locked. P17 of keyboard controller is pulled low.
MEMORY ADDRESS ERROR AT ...	Indicates a memory address error at a specific location. You can use this location along with the memory map for your system to find and replace the bad memory chips.
MEMORY PARITY ERROR AT ...	Indicates a memory parity error at a specific location. You can use this location along with the memory map for your system to find and replace the bad memory chips.
MEMORY SIZE HAS CHANGED SINCE LAST BOOT	Memory has been added or removed since the last boot. In EISA mode use Configuration Utility to reconfigure the memory configuration. In ISA mode enter Setup and enter the new memory size in the memory fields.
MEMORY VERIFY ERROR AT ...	Indicates an error verifying a value already written to memory. Use the location along with your system's memory map to locate the bad chip.
OFFENDING ADDRESS NOT FOUND	This message is used in conjunction with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem cannot be isolated.
OFFENDING SEGMENT	This message is used in conjunction with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem has been isolated.
PRESS A KEY TO REBOOT	This will be displayed at the bottom screen when an error occurs that requires you to reboot. Press any key to reboot.
PRESS F1 TO DISABLE NMI, F2 TO REBOOT	When BIOS detects a Non-maskable Interrupt condition during boot, this will allow you to disable the NMI and continue to boot, or you can reboot the system with the NMI enabled.
RAM PARITY ERROR - CHECKING FOR SEGMENT	Indicates a parity error in Random Access Memory.
SHOULD BE EMPTY BUT EISA BOARD FOUND PLEASE RUN EISA CONFIGURATION UTILITY	A valid board ID was found in a slot that was configured as having no board ID. When this error appears, the system will boot in ISA mode allowing you to run the EISA Configuration Utility.
SHOULD HAVE EISA BOARD BUT NOT FOUND PLEASE RUN EISA CONFIGURATION UTILITY	The board installed is not responding to the ID request, or no board ID has been found in the indicated slot. When this error appears, the system will boot in ISA mode allowing you to run the EISA Configuration Utility.
SLOT NOT EMPTY	A slot designated as empty by the EISA Configuration Utility actually contains a board. When this error appears, the system will boot in ISA mode allowing you to run the EISA Configuration Utility.
SYSTEM HALTED, (CTRL-ALT-DEL) TO REBOOT ...	The present boot attempt has been aborted and the system must be rebooted. Press and hold down the CTRL and ALT keys and press DEL.

Error Messages	Cause/Solution
WRONG BOARD IN SLOT PLEASE RUN EISA CONFIGURATION UTILITY	The board ID does not match the ID stored in the EISA non-volatile memory. When this error appears, the system will boot in ISA mode, allowing you to run the EISA Configuration Utility.
FLOPPY DISK(S) FAIL (80)	Unable to reset floppy subsystem
FLOPPY DISK(S) FAIL (40)	Floppy type mismatch
HARD DISK(S) FAIL (80)	HDD reset failed
HARD DISK(S) FAIL (40)	HDD controller diagnostics failed
HARD DISK(S) FAIL (20)	HDD initialization error
HARD DISK(S) FAIL (10)	Unable to recalibrate fixed disk
HARD DISK(S) FAIL (08)	Sector Verify failed
MANUFACTURING POST LOOP.	System will repeat POST procedure infinitely while the P15 of keyboard controller is pulled low. This is also used for M/B burn in test.
BIOS ROM CHECKSUM ERROR - SYSTEM HALTED.	The checksum of ROM address F0000H-FFFFFFH is bad.
MEMORY TEST FAIL.	BIOS reports the memory test failed if the onboard memory is tested error.

Appendix C – How to Upgrade a New BIOS

Please contact the Xycom Automation Application Engineering Department at 734-944-0482 to obtain the latest BIOS.

BIOS Update Procedure

Notes

- A. This procedure will erase any prior data on that floppy, so please proceed accordingly.
- B. Typically four files will be transferred, only COMMAND.COM being visible when running a simple directory listing.
- C. Please leave the diskette un-write protected for the balance of this procedure.

1. Make a boot disk. Go to the DOS command prompt in MS-DOS or Windows 9x and, with an available floppy disk in "A", type "format A:/s" That will format the floppy and transfer the needed system files to it.
2. Download the BIOS upgrade file and awdf flash.exe utility from an ICP web site to a temporary directory on your hard drive, or directly to the floppy formatted in step 1.
3. Copy (BIOS file and awdf flash.exe) files to the boot floppy disk.
4. Reboot the system to the DOS command prompt using the boot disk made in the previous steps.
5. At the DOS command prompt, awdf flash filename.xxx, (filename.xxx is the file name of the upgraded BIOS file), press Enter.
6. The first prompted option is to save the old BIOS. It is recommended that this option be selected in case it is later decided not to use the new version once it is installed. To save, enter Y. To not save, enter N.

Notes

- A. DO NOT save the old BIOS with the same file name as the new BIOS. If the same file name is used, the new BIOS will write over the old BIOS with no prompted warning.
- B. If the old BIOS is not saved write down the version number of the old BIOS and store it with your important computer documents. If not saving old BIOS, enter N (for "no") and skip to step 9.

- 7. Enter a NEW name for the old BIOS file, press Enter.
- 8. The second prompted option will be whether you want to flash your BIOS. Enter Y for yes, N for no.

Warning

Once the Enter key is pressed, DO NOT touch the keyboard, reset button, or power switch while flashing is in progress. A progress bar on the screen will show the progress of the flashing.

- 9. When the flashing process is complete, you will be asked to reset or power off the system. Remove the floppy disk from the drive and reset or power off the system.
- 10. Reboot the system and note that the BIOS version on the initial boot-up screen has changed to the new BIOS version. Your BIOS upgrade is now complete.

Recovering Your Old BIOS

- 1. Boot the system with the floppy disk that contains the new BIOS. If you do not have the floppy disk, repeat steps 1, 2, and 3 of the BIOS Upgrade Procedure above for the version of the BIOS recovering.
- 2. Complete steps 4 and 5 (filename.xxx is the name of the recovered BIOS file). Select N for no in step 6, and continue with steps 8, 9, and 10.

Install screen:

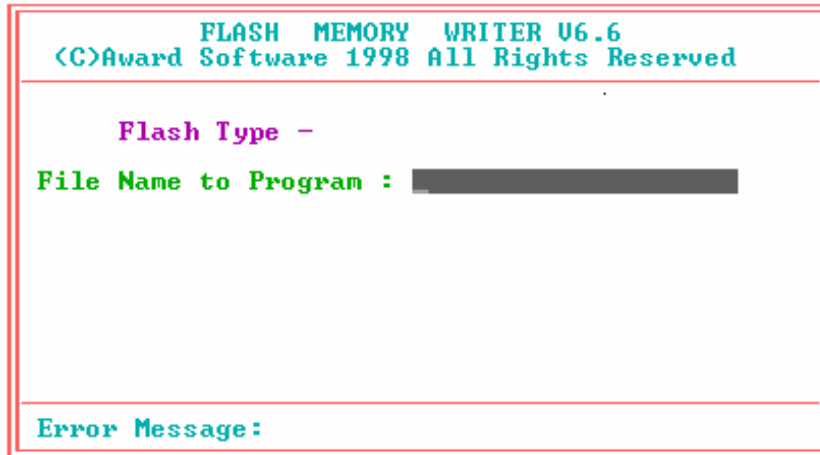


Figure C - 1. BIOS Upgrade Screen

Index

17" TFT LCD	18	HDD	20, 21, 22
AC '97	14	Installation	
ACPI Power Management	14	driver	69
AGP 4X	14	operating systems	68
Application Accelerator	14	Intel® 855GME	14, 15
Arm mounting	13	Intel® ICH4	14
Award BIOS setup	14	LAN	14
BIOS	17	LCD display	
BIOS recovery	77	specifications	2
BIOS setup	14	LCD voltage setup	18
overview	29	Maintenance	63
starting	29	general	63
using	31	hard drive	63
BIOS upgrades	76	Mechanical diminsions	8
CF card setup	18	motherboard	19
clear CMOS	17, 18	Mounting	
CMOS data	17	arm	13
Compact Flash Connector	22	panel	9
CPU	17, 28	wall	11
CPU board	14	Operating systems	
layout	16	installation	68
product overview	14	panel	19
Dimensions		Panel mounting	9
mechanical	8	PCI Local Bus Specification	14
Documentation kit	5	peripheral interface connectors	19
Drivers		POST messages	73
installing	69	Power on self test	73
miscellaneous	70	error messages	73
touch screen	69	POST beep	73
video	69	POST messages	73
Enhanced DMA controller	14	Preventive maintenance	63
Environmental specifications	72	general	63
Error messages (power on self test)	73	hard drive	63
Extreme Graphics 2	14	Product information	
Fuse		CPU board	14
replacement	63	environmental specifications	72
General information	1	general	1

LCD display2
 mechanical dimensions8
 touch screen.....2
 Product specifications
 environmental.....72
 LCD display2
 touch screen.....2
 Recovering the old BIOS.....77
 Repairs and service64
 Reverse side of unit
 system setup2, 3
 screen18
 serial port18
 Service and repairs64
 Side view of unit
 system setup4
 Specifications
 environmental.....72
 LCD display2

touch screen.....2
 system bus14
 System setup
 arm mounting13
 panel mounting.....9
 reverse side of unit.....2, 3
 side view of unit.....4
 wall mounting11
 Touch screen
 specifications.....2
 Touch screen drivers.....69
 Unit reverse side2, 3
 Unit side view4
 Upgrading the BIOS76
 USB 2.0.....14
 USB host controllers14
 Video drivers69
 Wall mounting11

144811(A)

Xycom Automation, LLC
734-429-4971
Fax: 734-429-1010
<http://www.xycom.com>

Canada Sales: 905-607-3400
Northern Europe Sales: +44-1604-790-767
Southern Europe Sales: +39-011-770-53-11

